

Submittal Package FTA1350 / FTA950

Wye-Delta Closed Transition Starting
With Power Transfer Switch

STANDARD WITHSTAND RATINGS 200-600V 100,000 Amps RMS Sym. WITHSTAND RATINGS INTERMEDIATE 65,000 Amps RMS Sym. WITHSTAND RATINGS 200-600V 150,000 Amps RMS Sym.

HIGH WITHSTAND RATINGS 200-600V 200,000 Amps RMS Sym.

STANDARD LOW WITHSTAND RATINGS 550-600V 42,000 Amps RMS Sym.

STANDARD

INTERMEDIATE

200-480V

LINE VOLTAGE	MOTOR HORSEPOWER	MOTOR HORSEPOWER
200	□ 125–200	□ 250
208	□ 150–200	□ 250
220-240	□ 150−250	□ 300
380-415	□ 250−350	□ 400-500
440-480	□ 300–500	□ 600
550-600	□ 350–500	

(DRAWINGS INCLUDED IN THIS PACKAGE ARE FOR STANDARD CONTROLLERS. ACTUAL "AS BUILT" DRAWINGS MAY DIFFER FROM THOSE SEEN HERE).

Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P 919 460-5200 F 919 460 5250 www.firetrol.com

While every precaution has been taken to ensure accuracy and completeness herein, Firetrol, Inc. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications and drawings are subject to change without notice. ©2019 Firetrol, Inc., All Rights Reserved.

Firetrol Mark Ilxg Electric Fire Pump Controller

FTA1350 - Wye-Delta Closed Transition Starting Specifications

1.0 Main Fire Pump Controller

The main fire pump controller shall be a factory assembled, wired and tested unit. The controller shall be of the combined manual and automatic type designed for wye-delta closed transition starting of the fire pump motor having the horsepower, voltage, phase and frequency rating shown on the plans and drawings.

1.1 Standards, Listings & Approvals

The controller shall conform to all the requirements of the latest editions of: NFPA 20, Standard for the Installation of Stationary Pumps for Fire Protection NFPA 70, National Electrical Code

The controller shall be listed by:

Underwriters Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers Canadian Standards Association CSA-C22.2, Standard for Industrial Control Equipment (cUL)

CÉ - Low Voltage Directive

The controller shall be approved by: Factory Mutual (IEC 62091)
The City of New York for fire pump service

1.2 Enclosure

The controller components shall be housed in a NEMA Type 2 (IEC IP22) drip-proof, wall mounted enclosure.

1.3 Withstand Ratings (Short Circuit Current Ratings)

All controller components shall be front mounted, wired and front accessible for maintenance. The minimum withstand rating of the controllers shall not be less than 100,000 Amps RMS Symmetrical at 200-600 Volts*. If the available system fault current exceeds these ratings, the controllers shall be supplied with a withstand rating of 150,000 or 200,000 Amps RMS Symmetrical, as required.

*Note: 100,000 Amp withstand rating not available in some larger horsepowers. Consult factory for details.

1.4 Isolation Switch and Circuit Breaker

The controller shall include a motor rated combination isolating disconnect switch/circuit breaker, mechanically interlocked and operated with a single, externally mounted handle. When moving the handle from OFF to ON, the interlocking mechanism shall sequence the isolating disconnect switch ON first, and then the circuit breaker. When the handle is moved from ON to OFF, the interlocking mechanism shall sequence the circuit breaker OFF first, and then the isolating disconnect switch.

The isolating disconnect switch/circuit breaker shall be mechanically interlocked so that the enclosure door cannot be opened with the handle in the ON position except by a hidden tool operated bypass mechanism. The isolating disconnect switch/circuit breaker shall be capable of being padlocked in the OFF position for installation and maintenance safety, and shall also be capable of being locked in the ON position without affecting the tripping characteristics of the circuit breaker. The controller door shall have a locking type handle and three point cam and roller vault type hardware. The circuit breaker trip curve adjustment shall be factory set, tested and sealed for the full load amps of the connected motor. The circuit breaker shall be capable of being

field tested to verify actual pick up, locked rotor, and instantaneous trip points after field installation without disturbing incoming line and load conductors.

1.5 Operator Interface

The fire pump controller shall feature an operator interface with user keypad. The interface shall monitor and display motor operating conditions, including all alarms, events, and pressure conditions. All alarms, events, and pressure conditions shall be displayed with a time and date stamp. The display shall be a 128x64 Backlit LCD capable of customized graphics. The display and interface shall be NEMA rated for Type 2, 3R, 4, 4X, and 12 protection and shall be fully accessible without opening the controller door. The display and user interface shall utilize multiple levels of password protection for system security. A minimum of 3 password levels shall be provided.

1.6 Ammeter/Voltmeter

The fire pump controller operator interface shall be capable of displaying true RMS digital motor voltage and current measurements for all three phases simultaneously. Displays requiring push-button and selector switches to toggle between phases or current and voltage shall not be accepted.

Voltage and current shall be measured by True RMS technology to provide the most accurate measurement for all sine waves, including non-sinusoidal waveforms. Average responding meters will not be accepted.

1.7 Digital Status/Alarm Messages

The digital display shall indicate text messages for the status and alarm conditions of:

 Motor On Fail to Start
Over Voltage
Emergency Start
Motor Overload
Disk Near Full
Remote Start
Under Voltage
Over Frequency
Drive Not Installed
Printer Error

Sequential Start Time
 Minimum Run Time

The Sequential Start Timer and Minimum Run Timer/Off Delay Timer shall be displayed as numeric values reflecting the value of the remaining time.

1.8 LED Visual Indicators

LED indicators, visible with the door closed, shall indicate:

Power AvailableRemote StartAlarmPump RunningTransfer Switch Normal

Transfer Switch Emergency

Phase Reversal
Motor Overload
Overvoltage
Interlock On
Emerg. Iso. Switch Off
Automatic Shutdown Disabled
Undervoltage

- System Pressure Low
- Deluge Open
- Phase Failure

1.9 Data Logging

The digital display shall monitor the system and log the following data:

- Motor Calls/Starts
 Pump Total Run Time
- Total Controller Pwr On Time
- Min/Max System Pressure
- Last Locked Rotor Trip
 Last Locked Rotor Current
 Min/Max Frequency • Max Starting Currents • Max Run Currents
- Min/Max Voltage per Phase while idle (not running)
 Min Voltage per Phase during
- Min/Max Voltage per Phase during Run

- Pump Last Run Time
- Last Pump Start
- Last Phase Fail/Reversal

2.0 Event Recording

Memory - The controller shall record all operational and alarm events to system memory. All events shall be time and date stamped and include an index number. The system memory shall have the capability of storing 3000 events and allow the user access to the event log via the user interface. The user shall have the ability to scroll through the stored messages in groups of 1 or 10.

2.1 USB Host Controller

The controller shall have a built-in USB Host Controller. A USB port capable of accepting a USB Flash Memory Disk shall be provided. The controller shall save all operational and alarm events to the flash memory on a daily basis. Each saved event shall be time and date stamped. The total amount of historical data saved shall solely depend on the size of the flash disk utilized. The controller shall have the capability to save settings and values to the flash disk on demand via the user interface.

2.2 Serial Communications

The controller shall feature a RS485 serial communications port for use with 2 or 4 wire Modbus RTU communications.

2.3 Solid State Pressure Transducer

The controller shall be supplied with a solid state pressure transducer with a range of 0-300 psi (0-20.7 bar) ±1 psi. The solid state pressure switch shall be used for both display of the system pressure and control of the fire pump controller. Systems using analog pressure devices or mercury switches for operational control will not be accepted. The START, STOP and SYSTEM PRESSURE shall be digitally displayed and adjustable through the user interface. The pressure transducer shall be mounted inside the controller to prevent accidental damage. The pressure transducer shall be directly pipe mounted to a bulkhead pipe coupling without any other supporting members. Field connections shall be made externally at the controller coupling to prevent distortion of the pressure switch element and mechanism.

2.4 Seismic Certification

The controller shall be certified to meet or exceed the requirements of the 2012 International Building Code and the 2013 California Building Code for Importance Factor 1.5 Electrical Equipment for Sds equal to 1.88 or less severe seismic regions. Qualifications shall be based upon successful tri-axial shake-table testing in accordance with ICC-ES AC-156. Certification without testing shall be unacceptable. Controller shall be clearly labeled as rated for installation in seismic areas and a Certificate of Conformance shall be provided with the controller.

NOTE: Not available on Model FTA1500 Controllers

2.5 Controller Operation

A digitally set On Delay (Sequential Start) timer shall be provided as standard. Upon a call to start, the user interface shall display a message indicating the remaining time value of the On Delay timer.

The controller shall be field programmable for manual stop or automatic stop. If set for automatic stopping, the controller shall allow the user to select either a Minimum Run Timer or an Off Delay Timer. Both timers shall be programmable through the user interface.

A nonadjustable restart delay timer shall be provided to allow the residual voltage of the motor to decay prior to restarting the motor. At least 2 seconds, but no more than 3 seconds, shall elapse between stopping and restarting the pump motor.

A weekly test timer shall be provided as standard. The controller shall have the ability to program the time, date, and frequency of the weekly test. In addition, the controller

shall have the capability to display a preventative maintenance message for a service inspection. The message text and frequency of occurrence shall be programmable through the user interface.

A Lamp Test feature shall be included. The user interface shall also have the ability to display the status of the system inputs and outputs.

An Audible Test feature shall be included to test the operation of the audible alarm device.

The controller shall not start the fire pump motor under a single-phase condition. If the motor is already running when a phase loss occurs, the controller shall continue to run the motor, but still display a Phase Failure alarm.

The fire pump controller software shall be automatically upgraded through the USB port by simply inserting a flash disk with the new software. Fire pump controllers that require laptop computers, handheld equipment or specialized devices for software upgrades shall be prohibited.

2.6 Manufacturer

The controller shall be a Firetrol brand.



Automatic Power Transfer Switch for use with Electric Fire Pump Controller

FTA950 Specifications

1.0 Main Fire Pump Controller with Transfer Switch

The main fire pump controller with transfer switch shall be a factory assembled, wired and tested as a single unit. The controller shall be of the combined manual and automatic type designed for full voltage starting of the fire pump motor having the horse-power, voltage, phase and frequency rating shown on the plans and drawings.

1.1 Standards, Listings & Approvals

The controller with transfer switch shall conform to all the requirements of the latest editions of:

NFPA 20, Standard for the Installation of Stationary Pumps for Fire Protection NFPA 70, National Electrical Code

The controller with transfer switch shall be approved by: Factory Mutual

The controller with transfer switch shall be listed by:

Underwriters Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers Canadian Standards Association CSA-C22.2, Standard for Industrial Control Equipment (cUL)

1.2 Enclosure

The power transfer switch shall be housed within the fire pump controller enclosure or in a NEMA Type 2 (IEC IP22) drip-proof enclosure attached directly to the fire pump controller. Where the power transfer switch is provided in an attached enclosure, the enclosures shall be fitted so that the assembly constitutes a single unit. The fire pump controller/power transfer switch shall be factory assembled, wired and tested as a unit prior to shipment.

1.3 Circuit Breaker

The power transfer switch shall include a motor rated combination isolating disconnect The power transfer switch shall include a motor rated combination isolating disconnect switch/circuit breaker, mechanically interlocked and operated with a single, externally mounted handle. When moving the handle from OFF to ON, the interlocking mechanism shall sequence the isolating disconnect switch closed first, and then the circuit breaker. When the handle is moved from ON to OFF, the interlocking mechanism shall sequence the circuit breaker open first, and then the isolating disconnect switch. The isolating disconnect switch/circuit breaker shall be mechanically interlocked so that the enclosure door cannot be opened with the handle in the ON position except by a hidden tool operated bypass mechanism. The isolating disconnect switch/circuit breaker shall be capable of being padlocked in the OFF position for installation and maintenance safety, and shall also be capable of being locked in the ON position without affecting the tripping characteristics of the circuit breaker. The circuit breaker trip curve adjustment shall be factory set, tested and sealed for the connected full load amps of the motor. The circuit breaker shall be capable of being field tested to verify actual pick up, locked rotor, and instantaneous trip points after field installation without disturbing incoming

rotor, and instantaneous trip points after field installation without disturbing incoming line and load conductors.

1.4 Operator Interface

The transfer switch control panel shall have a 4 line, 20 character LCD display and key-pad for viewing all available data and setting desired operational parameters. Voltage and frequency on both the normal and emergency sources shall be continuously monitored. The normal source pick up shall be set at 95% of nominal voltage and the emergency source pick up set at 90% of nominal voltage and 95% nominal frequency. Source status screens shall be provided for both normal & emergency to provide digital readout of voltage frequency and phase rotation on all 2 phases. readout of voltage, frequency and phase rotation on all 3 phases.

1.5 Automatic Transfer Switch

The automatic transfer switch shall consist of an inherently double throw power transfer

switch mechanism and a microprocessor control panel to provide automatic operation. The transfer switch and control panel shall be of the same manufacturer. The automatic transfer switch shall be an ASCO 7000 series with a group 5 control panel. The transfer switch shall be electrically operated and mechanically held. The electrical operator shall be a momentarily energized, single solenoid mechanism. The switch shall be mechanically interlocked to ensure only two possible positions, normal or emergency.

Switches having a neutral position shall not be permitted.

The switch shall be positively locked and unaffected by momentary outages, so that contact pressure is maintained at a constant value and contact temperature rise is minimized for maximum reliability and operating life. All main contacts shall be silver composition and inspection of all contacts shall be possible from the front of the switch without disassembly of operating linkages and without disconnection of power. Designs utilizing components of molded case circuit breakers, contactors, or parts thereof, which are not intended for continuous duty, repetitive switching or transfer between two active power sources are not acceptable.

A selector switch shall be supplied to manually test the transfer to emergency and the re-transfer to parmal power.

re-transfer to normal power.

1.6 Remote Alarm Contacts

Remote alarm contacts shall be supplied as standard for the following conditions:

- Emergency Source Isolation Switch Open
- Normal Power Available
- Emergency Power Available
- Transfer Switch Position

1.7 Visual Indicators

Indicators, visible with the door closed, shall indicate:
• Transfer Switch in Normal

- Transfer Switch in Emergency
- Normal Source Accepted
- Emergency Source Accepted
- Emergency Isolation Switch Open

1.8 Audible Alarm Indication

An audible alarm shall sound for the following conditions:

- Emergency Isolation Switch Open
- Transfer Switch in Emergency

A Silence Alarm push-button shall be supplied.

1.9 Seismic Certification

The controller shall be certified to meet or exceed the requirements of the 2012 International Building Code and the 2013 California Building Code for Importance Factor 1.5 Electrical Equipment for Sds equal to 1.88 or less severe seismic regions. Qualifications shall be based upon successful tri-axial shake-table testing in accordance with ICC-ES AC-156. Certification without testing shall be unacceptable. Controller shall be clearly labeled as rated for installation in seismic areas and a Certificate of Conformance shall be provided with the controller.

2.0 Manufacturer

The transfer switch shall be a Firetrol brand model FTA950.

Firetrol, Inc.



Mark Ilxg Electric Fire Pump Controllers

Product Description FTA1350

Wye-Delta Closed Transition Starting



Description—Firetrol® FTA1350 Wye-Delta, Closed Transition Starting Fire Pump Controllers are used with delta-wound squirrel cage motors. FTA1350 controllers are of the closed circuit transition type in which the motor circuit remains closed during the transition from start to run. The controller monitors, displays and records fire pump system information.

Actuating the controller via pressure, START push-button or deluge valve contact closes the start contactor connecting the motor to the line in the wye connection. The motor will draw approximately 33% of its normal inrush current and develop approximately 33% of its normal starting torque. After a time delay, the motor is automatically reconnected in delta, applying full voltage to the motor windings. During this transition, a resistor is connected to each phase, minimizing line disturbances and voltage drop during starting. These controllers are recommended especially for use with generator sets.

Approvals - Firetrol fire pump controllers are listed by Underwriters' Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers, CSA, Standard for Industrial Control Equipment, and approved by Factory Mutual. They are built to meet or exceed the requirements of the approving authorities as well as NEMA and the latest editions of NFPA 20, Installation of Centrifugal Fire Pumps, and NFPA 70, National Electrical Code.

Standard Features—The following are included as standard with each controller:

- Voltage surge protector
- Main Disconnect Switch sized for connected motor horsepower and voltage
- Fire pump Circuit Breaker
- Single handle Isolating Disconnect Switch/ Circuit Breaker mechanism

- Motor contactor
- Emergency Manual Run Mechanism to mechanically close motor contactor contacts in an emergency condition
- Built-in Start and Stop push-buttons to bypass automatic start circuits
- Minimum Run Timer / Off Delay Timer
- Daylight Savings Time Option
- Weekly Test Timer
- Elapsed Time Meter
- Door mounted display/interface panel featuring a 128 x 64 pixel backlit LCD Graphical Display, Membrane Type User Control Pushbuttons and easy to read LED Indicators for:
 - POWER AVAILABLE
 - ALARM
 - TRANSFER SWITCH NORMAL (If unit ordered with Automatic Power Transfer Switch)
 - TRANSFER SWITCH EMERGENCY (If unit ordered with Automatic Power Transfer Switch)
 - SYSTEM PRESSURE LOW
 - PUMP RUNNING
 - DELUGE OPEN
 - REMOTE START
 - INTERLOCK ON
 - FAIL TO START
 - MOTOR OVERLOAD EMERGENCY ISO SWITCH OFF (If unit ordered with Automatic Power Transfer Switch)
 - PHASE FAILURE
 - PHASE REVERSAL
 - AUTOMATIC SHUTDOWN DISABLED
 - OVERVOLTAGE
 - UNDERVOLTAGE
- Digital Pressure Display
- USB Host Controller and Port
- Solid State Pressure Transducer
- Data Log
- Event Log (3000 Events)
- True RMS Metering with simultaneous 3 Phase Display of Amps, Volts, Frequency, Pressure and Alarm Messages
- Disk Error message
- Disk Near Full message
- Pressure Error message
- Motor Over 320% message
- Local Start message
- Remote Start message
- Emergency Start message
- Fail To Start message
- Undervoltage message
- Overvoltage message NEMA Type 2 (IEC IP22) enclosure
- Suitable for use as Service Equipment
- Each standard controller comes with user set options for:
 - Interlock Alarm
 Low Pressure Audible
 - Low Suction • Pump Run
 - User Defined Input · Weekly Test

SPECIAL ENCLOSURES

- Enclosure, NEMA Type 4 (IP66), Painted Steel
- Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, -F Brushed Finish
- -FD Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Brushed Finish
- Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, -FDB 12 Gauge, Seam-Welded, Brushed Finish
- Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, -FDP Painted Finish
- -FXP Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, Painted Finish
- Enclosure, NEMA Type 12 (JP54), Painted Steel -G
- Enclosure, NEMA Type 3R (IP24), Painted Steel $-\mathsf{T}$

CIRCUIT BREAKER OPTION

- Intermediate withstand rating 150,000 Amps RMS Sym.
- -P High withstand rating 200,000 Amps RMS Sym
- Intermediate and High withstand ratings may not Note: be available for all horsepowers and voltages. Consult factory for availability.

ANTI-CONDENSATION SPACE HEATERS

- Space Heater, 120V Externally Powered with Circuit Breaker
- Space Heater, 120V Externally Powered with -J Circuit Breaker and Thermostat
- Space Heater, 120V Externally Powered with -K Circuit Breaker and Humidistat
- Space Heater, 240V Externally Powered with -LCircuit Breaker
- Space Heater, 240V Externally Powered with -M Circuit Breaker and Thermostat
- -NSpace Heater, 240V Externally Powered with Circuit Breaker and Humidistat

PRESSURE TRANSDUCERS

- Wetted Parts Including Pressure Sensor, 600 psi -B (42 Bar) Fresh Water
- Wetted Parts Including Pressure Sensor, 300 psi -C (21 Bar) Sea Water
- Wetted Parts Including Pressure Sensor, 600 psi -D (42 Bar) Fresh Water

COMBINED AUTOMATIC POWER TRANSFER SWITCHES

- -TSA FTA950 Automatic Transfer Switch, Group 5
- -TSAB FTA951 Automatic Transfer Switch, J-Bypass Isolation, Group 5

ALARMS

- Alarm Output Contacts Extra, Pump Operating (1 -AC Form A, 1 Form B)
- Alarm, Audible/Visible, Low Pump Room Temperature Alarm, Audible/Visible, Reservoir Low -AF
- -AG
- -AH Alarm, Audible/Visible, Low Suction Pressure
- Alarm Output Contacts, Fail to Start -AM
- Alarm Output Contacts, Low Pump Room -AV Temperature (Requires option -AF)
- -AW Alarm Output Contacts, Reservoir Low (Requires option -AG)
- -AY Alarm Output Contacts, Low Suction Pressure (Requires option -AH)

- -BW Alarm Output Contacts, Phase Failure/Phase Reversal
- Alarm Output Contacts, Pump Overload
- Alarm, Audible/Visible/Output Contacts, Low Suction -COM Pressure with Manual Reset Option, Pressure Switch Not Included (Do Not Use Options AH or AY)
- Alarm, Audible/Visible/Output Contacts, Low Suction -CTS Pressure Shutdown with Manual Reset Option and Pressure Switch (Do Not Use Options AH or AY)
- -EG Alarm, Audible/Visible, Relief Valve Discharge
- -EH Alarm Output Contacts, Relief Valve Discharge (Requires option -EG)
- -EJ Àlarm, Audible/Visible, Flow Meter On
- Alarm Output Contacts, Flow Meter On -EK (Requires option -EJ)
- -KH Àlarm Output Contacts, Common Alarm
- Visible Indicator, Jockey Pump Operating -JR
- -JT Alarm, Audible/Visible, Jockey Pump Trouble -P
- Alarm, Audible/Visible, Built-In 120V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)
- -PE Alarm Output Contacts, Low System Pressure (pump on demand)
- -PT Alarm, Audible/Visible, Built-in 240V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)

MISCELLANEOUS

- Thermostat, Low Pump Room Temperature, - A7 Mounted and Wired
- -ED Output Contacts, Load Shed (Selectable power source and adjustable time delay to remove noncritical loads before starting)
- Series Pumping Operation, High Zone Controller -EL
- Series Pumping Operation, Mid Zone Controller -EM
- Series Pumping Operation, Low Zone Controller -FN
- Rating, Nameplate to be marked 380-400V (Use -FZX with voltage code 'F' or 'FZ')
- Marking, ČĚ with External Wet Parts (Requires NEMA -IEC Type 12 (IP54) Enclosure as minimum)
- Marking, CE with Internal Wet Parts (Requires NEMA -IECI Type 12 (IP54) Enclosure as minimum)
- -OSP OSHPD Seismic Certification (State of California) (Requires Option -SEI)
- -MZN Neutral Lug, Service Entrance, Non-insulated Bonded to Enclosure
- -PK Terminal Blocks, Extra Remote Start
- -PY Output Contacts, Motor Space Heater Circuit, Externally Powered
- -S Tropicalization
- Marking, Seismic Certified (in accordance with IBC) -SEI (Note: Not available on model FTA1500)
- -USBX Data Port, External USB
- Scheduled Service Message (when factory pro--ZPA grammed or programmed by Firetrol representative during start-up)
- Data Port, Serial Modbus RTU Over 2-Wire or 4-Wire -ZPM
- -ZPN Data Port, Serial Modbus RTU Over Ethernet TCP/IP

Export packaging (Wooden crating to conform to IPPC Standards)

Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com



Power Transfer Switch

Product Description FTA950

Assembled With Electric Fire Pump Controller



Description—Firetrol® Power Transfer Switches are available completely assembled with Firetrol Electric Fire Pump Controllers; full or reduced voltage types. The power transfer switches are built for use with generator set or 2nd utility use. The entire package of power transfer switch and controller is completely factory assembled, wired, tested and shipped as a complete unit for easy field connection to the power sources and the fire pump motor.

Approvals—Firetrol power transfer switches are listed by Underwriters' Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers; UL1008, Automatic Transfer Switches; UL508, Industrial Control Equipment, CSA, Standard for Industrial Control Equipment, and approved by Factory Mutual. They are built to meet or exceed the requirements of the approving authorities as well as NEMA and the latest editions of NFPA 20, Installation of Centrifugal Fire Pumps, and NFPA 70, National Electrical Code.

Standard Features—The following are included as standard with each transfer switch:

- Emergency power source disconnect switch sized for connected motor horsepower and voltage
- · Fire pump circuit breaker
- Mark II monitors for overcurrent tripping (nonthermal) of circuit breaker and alarm indicator for phase failure/phase reversal
- 3-pole, double throw transfer switch mechanism, electrically operated, mechanically held
- ASCO Power Tech Group 5 Control module providing for the following:
 - -Door mounted operator interface panel with 4 line LCD display
 - -In-phase monitor
 - -Programmable engine exerciser
 - -Transfer switch data logging
 - -Differential voltage sensing on all phases of the normal power source
 - -Voltage sensing of the emergency power source
 - -Frequency sensing of the emergency power source
 - -Transfer time delay to compensate for momentary power outages of the normal source
 - -Retransfer from emergency to normal source is automatically delayed unless the emergency source fails
 - -Cool-down timer for unloaded running of the generator set after retransfer to the normal power source
 - -Instantaneous retransfer to normal if the emergency source fails and the normal source is available
 - -3 second transfer restart delay to reduce current surges when transferring to or from the emergency source
 - NO and NC engine control contacts to start the generator set when the normal power source fails
- Transfer Switch Normal LED
- Transfer Switch Emergency LED
- Emergency Isolating Switch Open LED
- Test Selector Switch
- Transfer By-pass Switch
- Silence Alarm Push-button
- Emergency Isolating Switch Open and Transfer Switch in Emergency Audible Alarms
- Output contacts (NO and NC) for Generator Start, Emergency Isolating Switch Open and Transfer Switch position indicators
- NEMA Type 2 enclosure (IEC IP22)

Options—The following are available as options to FTA950 Power Transfer Switches: (Note: The short circuit current rating for the normal power source and the emergency power source side of the power transfer switch will be the same as the rating of the fire pump controller assembled with the power transfer switch.)

Circuit Breaker Option

- -M Standard withstand rating 200-600V 100,000 Amps, RMS Sym.
- -N Intermediate withstand rating 200-600V 150,000 Amps, RMS Sym.
- -P High withstand rating 200-600V 200,000 Amps, RMS Sym.
- -Q Standard intermediate withstand rating 200-480V 65,000 Amps RMS Sym.
- -R Standard low withstand rating 550-600V 42,000 Amps RMS Sym.

Modifications—The following are available as modifications to all transfer switches:

Special Enclosures

- Enclosure, NEMA Type 4 (IP66), Painted Steel
- -F Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, Brushed Finish
- -FD Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Brushed Finish
- -FDB Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, 12 Gauge, Seam-Welded, Brushed Finish
- -FDP Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Painted Finish
- -FXP Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, Painted Finish
- -G Enclosure, NEMA Type 12 (IP54), Painted Steel
- -T Enclosure, NEMA Type 3R (IP24), Painted Steel

Anti-condensation Space Heaters

- -H 120 Volt space heater
- -J 120 Volt space heater with thermostat
- -K 120 Volt space heater with humidistat
- -L 240 Volt space heater
- -M 240 Volt space heater with thermostat
- -N 240 Volt space heater with humidistat

Alarms

- -EC Extra contacts for remote indication, transfer switch position
- -BX Contacts for remote indication, second utility source phase failure/phase reversal (FTA950 only)

Miscellaneous

- -ED Load shed circuits
- -TN As above, with serial communications port
- -S Tropicalization

Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com



Model Number Selection Guide

FTA1000 - FTA1930

Mark Ilxe Electric Fire Pump Controllers

FTA1000, 1250, 1300, 1350, 1500, 1800, 1930 ELECTRIC FIRE PUMP CONTROLLERS Example: FTA1300-AM75HH-xx

Starting Method

1000 - Across-the-line (direct on line)

1250 - Part Winding (50%-50% windings)

1300 - Wye-delta (star-delta), open transition

1350 - Wye-delta (star-delta), closed transition

1500 - Primary resistor

1800 - Autotransformer

1930 - Digital Solid-state soft start/stop

Start/Stop Options

- A Automatic start with timed permissive stop after minimum run time and manual start with manual stop, field convertible to automatic start and manual start with manual stop only
- B Automatic start and manual start with manual stop
- C Manual start and stop

Short Circuit Current Rating

- M Standard short circuit rating 100,000 Amperes RMS Sym. at 200 - 600 V
- N Intermediate short circuit rating 150,000 Amperes RMS Sym. at 200 - 600 V
- P High short circuit rating 200,000 Amperes RMS Sym. at 200 - 600 V
- Q Standard intermediate short circuit rating 65,000 Amperes RMS Sym. at 550 600 V
- R Standard low short circuit rating 42,000 Amperes RMS Sym. at 550 - 600 V

Horsepower Rating

The second of the second	
03 - 3 HP	100 - 100 HP
05 - 5 HP	125 - 125 HP
07 - 7 1/2 HP	150 - 150 HP
10 - 10 HP	200 - 200 HP
15 - 15 HP	250 - 250 HP
20 - 20 HP	300 - 300 HP
25 - 25 HP	350 - 350 HP
30 - 30 HP	400 - 400 HP
40 - 40 HP	450 - 450 HP
50 - 50 HP	500 - 500 HP
60 - 60 HP	600 - 600 HP
75 - 75 HP	700 - 700 HP

Modifications
See Back

Three Phase Voltage

A - 220-240 Volt, 60 Hertz (230 V)

AZ - 220-230 Volt, 50 Hertz

B - 440-480 Volt, 60 Hertz (460 V)

BZ - 415 Volt, 50 Hertz

C - 550-600 Volt, 60 Hertz (575 V)

F - 380 Volt, 60 Hertz

FZ - 380 Volt, 50 Hertz

H - 208 Volt, 60 Hertz

HH - 200 Volt, 60 Hertz

Model Number Selection Guide – Options & Modifications

SPECIAL ENCLOSURES

- Enclosure, NEMA Type 4 (IP66), Painted Steel
- -F Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, **Brushed Finish**
- Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, **Brushed Finish**
- -FDB Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, 12 Gauge, Seam-Welded, Brushed Finish
- -FDP Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Painted Finish
- Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, -FXP Painted Finish
- Enclosure, NEMA Type 12 (IP54), Painted Steel -G
- Enclosure, NEMA Type 3R (IP24), Painted Steel -T

CIRCUIT BREAKER OPTION

- Intermediate withstand rating 150,000 Amps RMS Sym.
- -P High withstand rating 200,000 Amps RMS Sym
- Note: Intermediate and High withstand ratings may not be available for all horsepowers and voltages. Consult factory for availability.

ANTI-CONDENSATION SPACE HEATERS

- -H Space Heater, 120V Externally Powered with Circuit
- Space Heater, 120V Externally Powered with Circuit -, J Breaker and Thermostat
- -K Space Heater, 120V Externally Powered with Circuit Breaker and Humidistat
- Space Heater, 240V Externally Powered with Circuit -1 Breaker
- Space Heater, 240V Externally Powered with Circuit -M Breaker and Thermostat
- -N Space Heater, 240V Externally Powered with Circuit Breaker and Humidistat

PRESSURE TRANSDUCERS

- 0-600 psi (0-42.25 bar) Pressure Transducer for -B Fresh Water Service
- 0-300 psi (0-21.1 bar) Pressure Transducer for -C Copper Corrosive Service
- -D 0-600 psi (0-42.25 bar) Pressure Transducer for Corrosive Service

COMBINED AUTOMATIC POWER TRANSFER SWITCHES

- FTA950 Automatic Transfer Switch, Group 5
- FTA951 Automatic Transfer Switch, J-Bypass Isolation, Group 5

ALARMS

- Alarm Output Contacts Extra, Pump Operating (1 -AC Form A, 1 Form B)
- Alarm, Audible/Visible, Low Pump Room Temperature -AF
- Alarm, Audible/Visible, Reservoir Low -AG
- -AH Alarm, Audible/Visible, Low Suction Pressure
- Alarm Output Contacts, Fail to Start -AM
- -AV Alarm Output Contacts, Low Pump Room Temperature (Requires option -AF)
- -AWAlarm Output Contacts, Reservoir Low (Requires option -AG)
- -AY Alarm Output Contacts, Low Suction Pressure (Requires option -AH)

- -BW Alarm Output Contacts, Phase Failure/Phase Reversal
- Alarm Output Contacts, Pump Overload -BY
- Alarm, Audible/Visible/Output Contacts, Low Suc--COM tion Pressure with Manual Reset Option, Pressure Switch Not Included (Do Not Use Options AH or AY)
- -CTS Alarm, Audible/Visible/Output Contacts, Low Suction Pressure Shutdown with Manual Reset Option and Pressure Switch (Do Not Use Options AH or AY)
- -EG Alarm, Audible/Visible, Relief Valve Discharge
- Alarm Output Contacts, Relief Valve Discharge -EH (Requires option -EG)
- -FI Alarm, Audible/Visible, Flow Meter On
- Alarm Output Contacts, Flow Meter On (Requires -EK
- -KH Alarm Output Contacts, Common Alarm -JR Visible Indicator, Jockey Pump Operating
- Alarm, Audible/Visible, Jockey Pump Trouble -JT -P
 - Alarm, Audible/Visible, Built-In 120V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)
- -PE Alarm Output Contacts, Low System Pressure (pump on demand)
- -PT Alarm, Audible/Visible, Built-in 240V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)

MISCELLANEOUS

- Thermostat, Low Pump Room Temperature, Mount--AZ ed and Wired
- -FD Output Contacts, Load Shed (Selectable power source and adjustable time delay to remove noncritical loads before starting)
- -FI Series Pumping Operation, High Zone Controller
- -FM
- Series Pumping Operation, Mid Zone Controller Series Pumping Operation, Low Zone Controller -FN
- -FZX Rating, Nameplate to be marked 380-400V (Use with voltage code 'F' or 'FZ')
- -IEC Marking, CE with External Wet Parts (Requires NEMA Type 12 (IP54) Enclosure as minimum)
- Marking, CE with Internal Wet Parts (Requires NEMA -IECI Type 12 (IP54) Enclosure as minimum)
- -OSP OSHPD Seismic Certification (State of California) (Requires Option -SEI)
- Neutral Lug, Service Entrance, Non-insulated -MZN Bonded to Enclosure
- -PK Terminal Blocks, Extra Remote Start
- -PY Output Contacts, Motor Space Heater Circuit, Externally Powered
- Tropicalization -S
- -SFI Marking, Seismic Certified (in accordance with IBC) (Note: Not available on model FTA1500)
- Data Port, External USB -USBX
- -ZPA Scheduled Service Message (when factory programmed or programmed by Firetrol representative during start-up)
- -ZPM Data Port, Serial Modbus RTU Over 2-Wire or 4-Wire
- -ZPN Data Port, Serial Modbus RTU Over Ethernet TCP/IP

Export packaging (Wooden crating to conform to IPPC Standards) FTA1000 - 1930

Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250




HH = 200V, 60 Hz

Model Number Selection Guide

Assembled With Electric Fire Pump Controller

FIRE PUMP POWER TRANSFER SWITCH FTA950

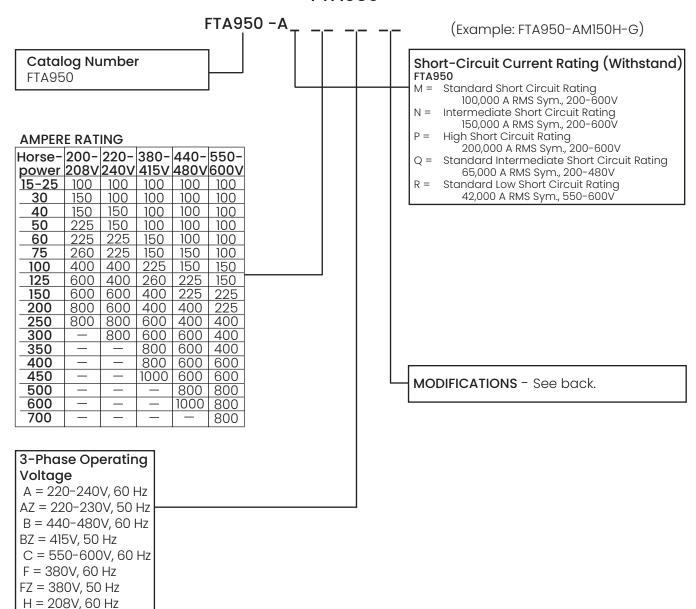

SPECIAL ENCLOSURES

Transfer Switch NEMA Type enclosure will be the same as selected for the Fire Pump Controller.

ANTI-CONDENSATION SPACE HEATERS

- -H 120 Volt Space Heater
- -J 120 Volt Space Heater With Thermostat
- -K 120 Volt Space Heater With Humidistat
- -L 240 Volt Space Heater
- -M 240 Volt Space Heater With Thermostat
- -N 240 Volt Space Heater With Humidistat


MISCELLANEOUS


- Extra contacts for remote indication, transfer switch position indicator
- -ED Load shed contacts
- -TN Microprocessor based (Group 5) control module with serial communications port
- -S Tropicalization

Firetrol, Inc.



Mark Ilxe Electric Fire Pump Controllers

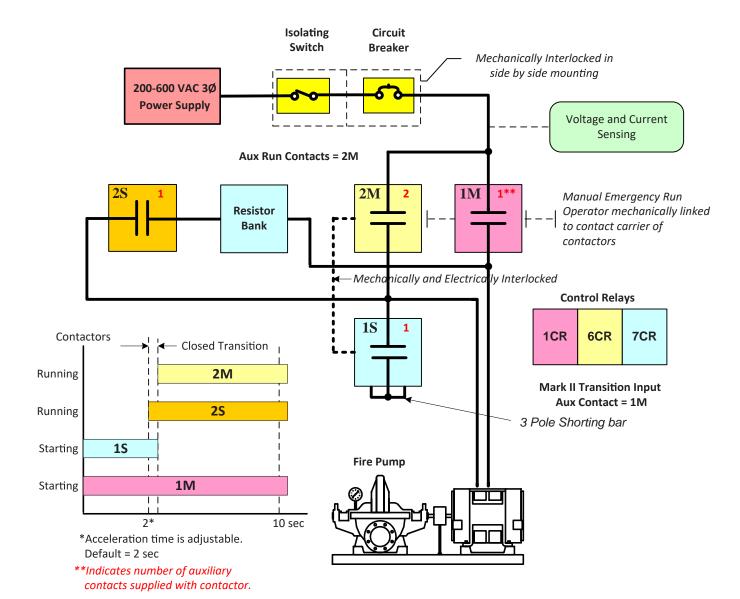

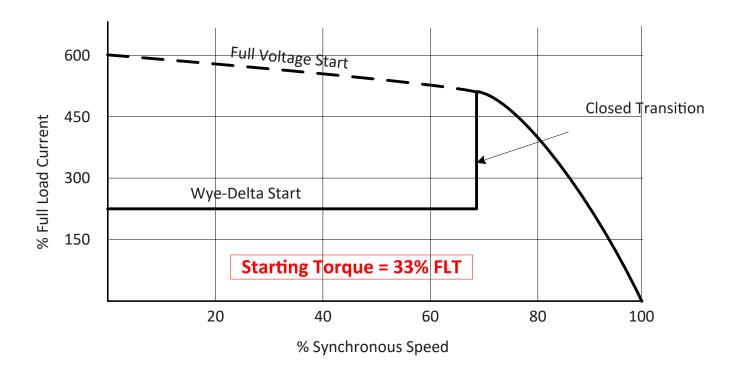

Firetrol, Inc.


3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com




Mark Ilxg Electric Fire Pump Controllers

Dimensions and Shipping Weight

FTA1350 / FTA950
Wye-Delta Closed Transition Starting
With Power Transfer Switch

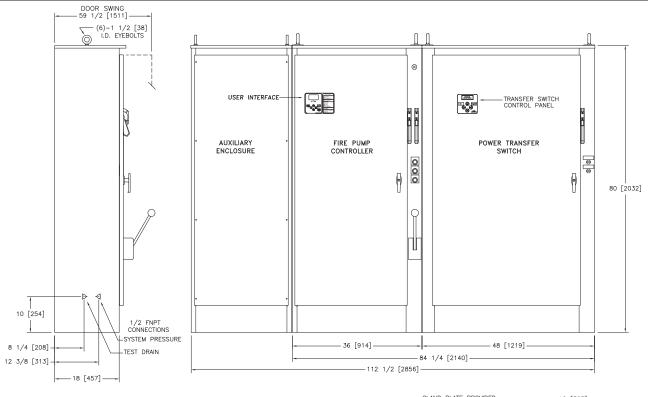

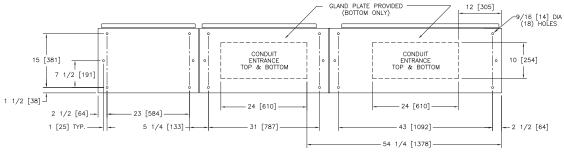

STANDARD WITHSTAND RATINGS 200-600V 100,000 Amps RMS Sym.

INTERMEDIATE
WITHSTAND RATINGS
200-600V
150,000 Amps RMS Sym.

HIGH WITHSTAND RATINGS 200-600V 200,000 Amps RMS Sym

STANDARD INTERMEDIATE
WITHSTAND RATINGS
200-480V
65,000 Amps RMS Sym.

STANDARD LOW WITHSTAND RATINGS 550-600V 42,000 Amps RMS Sym.

LINE VOLTAGE	MOTOR HORSEPOWER	MOTOR HORSEPOWER
200	□ 125-200	□ 250
208	□ 150-200	□ 250
220-240	□ 150-250	□ 300
380-415	□ 250-350	□ 400-500
440-480	□ 300-500	□ 600
550-600	□ 350-500	

DO NOT INSTALL IN AMBIENT TEMPERATURES BELOW 41°F [5°C].

ALL DIMENSIONS - INCHES [MM] SHIPPING WEIGHT - POUNDS [KG]

THIS DIMENSION DRAWING COVERS FTA1350 CONTROLLERS AT THE HORSEPOWER, VOLTAGE AND WITHSTAND RATINGS AS LISTED IN THE TABLE. FOR OTHER HORSEPOWER OR WITHSTAND RATINGS, REFER TO ED1350-02

SPECIFICATIONS AND DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. DO NOT USE FOR CONSTRUCTION. REQUEST CONSTRUCTION DRAWINGS FROM FIRETROL OR YOUR LOCAL FIRETROL REPRESENTATIVE.

	SIZE A	BY	DATE
THIRD ANGLE	DRAWN BY	GFD	07-10-02
PROJECTION	FINAL APPROVAL	GFD	07-10-02



UPDATED TITLE BLOCK		Е	280937	JMW	TEF	09-20-19
REVISED MOTOR HORSEPOWER CHART	D	237364	JMW	TEF	05-31-12	
REVISION DESCRIPTION	REV	ECN NO	BY	APP	DATE	
DIMENSIONS AND SHIPPING WEIGHT	FTA1350 WITH FTA950	DD1350-66				
OLOGED TOMACITION WILL DELTA FID	E DUIMB CONTROLLED	DD 1330 - 00				
CLOSED TRNASITION WHE-DELTA FIRI	DWG F	ECN 28	0937	s	SHEET 1 OF 1	

APPROXIMATE SHIPPING WEIGHT


1950 [885]



Field Connections FTA1350 / FTA950

Wye-Delta Closed Transition Starting
With Power Transfer Switch

Mark IIxe Electric Fire Pump Controllers

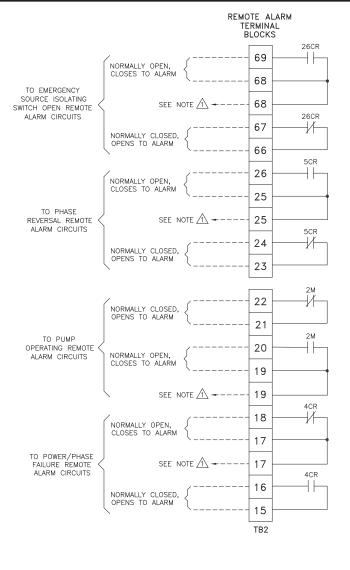

3-PHASE INCOMING LINES BONDING & GROUNDING LUGS

L1 L2 L3 GROUNDING LUGS

ISOLATING SWITCH GND

MOTOR CONTACTORS

T12 T10 T11 T1 T2 T3

T6 T4 T5 MOTOR

MOTOR

NOTES


- 1— Incoming line terminals are provided to accommodate wire sizes at 125% of motor full load current per NFPA 70—2008, National Electrical Code, Table 430—250, Section 695.6(c), and Table 310—16, 75' rated Copper conductors.
- 2- Controller is phase rotation sensitive. Incoming lines L1, L2 and L3 must be in ABC, right hand rotation sequence for proper operation of the phase monitor.
- 3- Motor connections shown are typical. Since motor connections vary widely, refer to the motor connection diagram for specific wiring arrangement.
- 4— For Incoming line terminals and motor terminals field wire capacity refer to drawing FC1350—51

NOTE: USE COPPER CONDUCTORS ONLY FOR ALL CONNECTIONS

SPARE TERMINALS PROVIDED FOR PARALLEL
 CONNECTION OF REMOTE ALARMS (IF REQUIRED)

NOTE: TERMINALS FOR CUSTOMER CONNECTIONS REQUIRE 3.5MM SLOTTED SCREW DRIVER

TERMINAL	TIGHTENING TOP	RQUE
TERMINAL TYPE	WIRE SIZE	TIGHTENING TORQUE
CONTROL AND ALARM TERMINALS	#14-12 AWG [2.5-4 MM ²]	5.6 lb-in [.6 Nm]

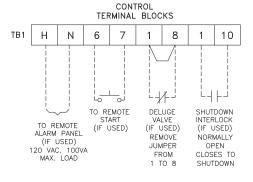

280937 JMW TE 09-20-19

PRESSURE SYSTEM CONNECTION 1/2" FNPT

-NOTE-ALARM CONTACT RATING PILOT DUTY 250 VAC, 30 VDC 10 A. MAX. LOAD

					ADD NOTE FOR COPPER CONDUCTORS ONLY, UPDATED LOGO & TITLE BLOCK			226253	JC	TEF	12-09-09
SIZE A BY DATE DRAWN BY TEF 05-06-02	BY	DATE	ATE REVISION DESCRIPTION			REV	REV ECN NO E		APP	DATE	
	F Firetrol, Inc.	FIELD CONNECTIONS	FTA1350 WITH FTA900, 950	DRAWING NUMBER FC1350-55							
THIRD ANGLE					WYE-DELTA CLOSED TRANSITION FIRE PUMP CONTROLLER			FC1330 - 33			
PROJECTION FINAL APPROVAL TEF 05-06-02	© Firetroi, Inc. Not for construction.	WITH POWER TRANSFER SWITCH	E PUMP CONTROLLER	DWG B	ECN 280	937	SH	HEET 1 OF 2			
All rights reserved. The	All rights reserved. The drawing and the information contained or depicted herein are the sole properly of Firetrol, Inc. Copies are communicated to the recipient in strict confidence and may not be retransmitted, published, reproduced, copied or used in any manor, including as the basis for the manufacture or sale of any products, without the express prior writino consent of Firetrol, Inc.										


UPDATED TITLE BLOCK



Field Connections FTA1350 / FTA950

Wye-Delta Closed Transition Starting With Power Transfer Switch

Mark IIxe Electric Fire Pump Controllers

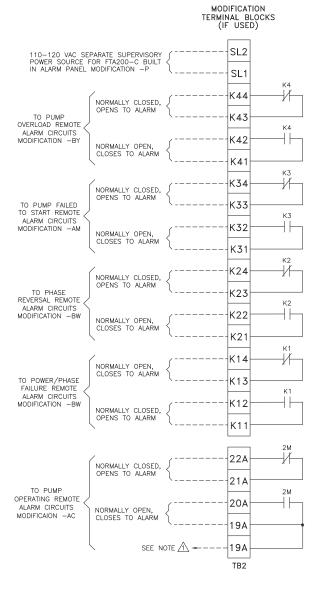


↑ SPARE TERMINALS PROVIDED FOR PARALLEL CONNECTION OF REMOTE ALARMS (IF REQUIRED)

NOTE: TERMINALS FOR CUSTOMER CONNECTIONS REQUIRE 3.5MM SLOTTED SCREW DRIVER

TERMINAL	TIGHTENING TOP	RQUE
TERMINAL TYPE	WIRE SIZE	TIGHTENING TORQUE
CONTROL AND ALARM TERMINALS	#14-12 AWG [2.5-4 MM ²]	5.6 lb-in [.6 Nm]

-NOTE-ALARM CONTACT RATING PILOT DUTY 250 VAC, 30 VDC 10 A. MAX. LOAD

NOTE: USE COPPER CONDUCTORS ONLY FOR ALL CONNECTIONS

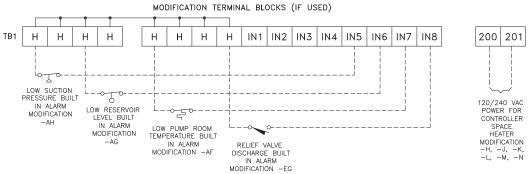

					UPDATED TITLE BLOCK		В	280937	JMW	TEF	09-20-19
					ADD NOTE FOR COPPER CONDUCTORS ONLY, UPDATED LOGO & TITLE BLOCK			226253	JC	TEF	12-09-09
	SIZE A BY DATE	E	REVISION DESCRIPTION			ECN NO	BY	APP	DATE		
	DDAMALBY	NBY TEF 05-06-02	Firetrol, Inc.	FIELD CONNECTIONS	FTA1350 WITH FTA900, 950	DRAWING NUMBER					
THIRD ANGLE	THIRD ANGLE		05-06-02		WYE-DELTA CLOSED TRANSITION FIRE PUMP CONTROLLER			FC1350-55			
		© Firetrol, Inc. Not for construction. Subject to change without notice.	WITH POWER TRANSFER SWITCH		DWG B	ECN 28	0937	SH	IEET 2 OF 2		



Field Connections FTA1350

Wye-Delta Closed Transition Starting Line & Motor Wire Terminal Capacity

LINE TERMINALS-WIRE CAPACITY AND QUANTITY (CU) $\langle 1 \rangle$

	WIII W. LO 11	711112 0711 71	0111 71110	Q 07 (1 1 1 1 1	, (00)		
	MAX	ІМИМ МОТОІ	R HORSEPO	WER		WIRE SIZE (CU)	WIRE SIZE SERVICE ENTRANCE (2)
200V	208V	220-240V	380-415V	440-480V	550-600V	PER PHASE	GROUND LUG (CU)
20	20	25	40	50	60	(1) #14 AWG-#1/0 AWG (1) 2.5 MM ² -50 MM ²	(2) #14 AWG-#2/0 AWG (2) 2.5 MM ² -70 MM ²
40	40	40	75	100	125	(1) #4 AWG-300 kcmil (1) 25 MM ² -150 MM ²	(2) #14 AWG-#2/0 AWG (2) 2.5 MM ² -70 MM ²
60	60	60	100	150	150	(1) #4 AWG-300 kcmil (1) 25 MM ² -150 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²
100	100	100	150	250	300	(1) 250 kcmil-500 kcmil (1) 120 MM ² -240 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²
	125	125	200			(2) #3/0 AWG-250 kcmil (2) 95 MM ² -120 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²
200	200	250	350	500		(3) #2/0 AWG-400 kcmil (3) 70 MM ² -200 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²
250	250	300	500	600		(4) #4/0 AWG-500 kcmil (4) 100 MM ² -240 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²

MOTOR TERMINALS-WIRE CAPACITY AND QUANTITY (CU) $\langle 1 \rangle$

	MAXI	мим мотог	R HORSEPO	WER		WIRE SIZE (CU)
200V	208V	220-240V	380-415V	440-480V	550-600V	PER PHASE
60	60	60	100	150	150	(1) #6 AWG-#2/0 AWG (1) 16 MM ² -70 MM ²
75	75	100	150	200	250	(1) #6 AWG-250 kcmil (1) 16 MM ² -120 MM ²
150	150	150	250	350	450	(1) #4 AWG-400 kcmil (1) 25 MM ² -200 MM ²
		200	300	450	500	(2) #4 AWG-500 kcmil (2) 25 MM ² -240 MM ²
250	250	300	500	600		(2) 250 kcmil-500 kcmil (2) 120 MM ² -240 MM ²

- FOR CORRECT WIRE SIZING, REFER TO NATIONAL ELECTRICAL CODE, NFPA 70.
- WHEN REQUIRED BY AUTHORITY HAVING JURISDICTION.

						UPDATED LINE TERMINAL HP/VOLTAGE CH/	ART, CHANGED TO XT4 BREAKERS	D	270091	TEF .	ΓEF
ſ	THIRD ANGLE PROJECTION F	SIZE A	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	BY ,	APP
		DRAWN BY	TEF	05-06-12	Firetrol, Inc.	FIELD CONNECTIONS	FTA1350	FC1350-51			
		121		-	WYE-DELTA CLOSED TRANSITION FIRE PUMP CONTROLLER			FC1330-31			
		FINAL APPROVAL	TEF	05-06-12	© Firetrol, Inc. Not for construction. Subject to change without notice.	LINE AND MOTOR FIELD WIRE TERMINA		DWG E	ECN 280	ე937	s
	All rights reserved. The drawing and the information contained or depicted herein are the sole procept of Firefol. Inc. Cooles are communicated to the recipient in strict confidence and may not be retransmitted, outlished, reproduced, copied or used in any manor, including as the basis for the manufacture or sale of any products, without the express prior written co										




	UPDATED TITLE BLOCK	Е	280937	JMW	TEF	09-20-19		
Ī	UPDATED LINE TERMINAL HP/VOLTAGE CHA	D	270091	TEF	TEF	11-30-17		
1	REVISION DESCRIPTION	REV ECN NO BY APP D.						
	FIELD CONNECTIONS	DRAWING NUMBER						
	WYE-DELTA CLOSED TRANSITION FIRE LINE AND MOTOR FIELD WIRE TERMIN.	FC1350-51				HEET 1 OF 1		



Field Connections FTA950

Assembled With Electric Fire Pump Controllers

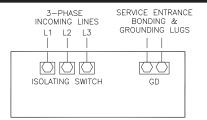

NOTE

Incoming line terminals are provided to accomodate wire sizes at 125% of motor full load current per NFPA 70, National Electrical Code, Table 430-250, Section 695.6(c), and Table 310-16, 75° rated Copper conductors.


-USE COPPER CONDUCTORS ONLY-

LINE TERMINALS-WIRE CAPACITY AND QUANTITY (CU) $\langle 1 \rangle$

LINE IEKI	LINE TERMINALS—WIRE CAPACITY AND QUANTITY (CO)													
	MAX	імим мото	R HORSEPC	WER		WIRE SIZE (CU)	WIRE SIZE SERVICE ENTRANCE (2)							
200V	00V 208V 220-240V 380-415V 440-480V 550-600V					PER PHASE	GROUND LUG (CU)							
20	20	25	40	50	60	(1) #14 AWG-#1/0 AWG (1) 2.5 MM ² -50 MM ²	(2) #14 AWG-#2/0 AWG (2) 2.5 MM ² -70 MM ²							
40	40	40	75	100	125	(1) #4 AWG-300 kcmil (1) 25 MM ² -150 MM ²	(2) #14 AWG-#2/0 AWG (2) 2.5 MM ² -70 MM ²							
60	60	60	100	150	150	(1) #4 AWG-300 kcmil (1) 25 MM ² -150 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²							
100	100	100	150	250	300	(1) 250 kcmil-500 kcmil (1) 120 MM ² -240 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²							
	125	125	200			(2) #3/0 AWG-250 kcmil (2) 95 MM ² -120 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²							
200	200	250	350	500		(3) #2/0 AWG-400 kcmil (3) 70 MM ² -200 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²							
250	250	300	500	600		(4) #4/0 AWG-500 kcmil (4) 100 MM ² -240 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²							


- for correct wire sizing, refer to NATIONAL ELECTRICAL CODE, NFPA 70.
- WHEN REQUIRED BY AUTHORITY HAVING

CONTROL AND ALARM TERMINAL BLOCKS

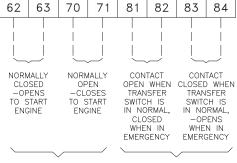

ENGINE START CONTACTS TRANSFER SWITCH
POSITION INDICATOR
CONTACTS FOR REMOTE
ALARM CIRCUITS

 MODIFICATION ALARM TERMINAL BLOCKS



OPEN WHEN CLOSED WHE
TRANSFER TRANSFER
SWITCH IS SWITCH IS
IN NORMAL,
CLOSED -OPENS
WHEN IN WHEN IN
EMERGENCY EMERGENCY

TRANSFER SWITCH
POSITION INDICATOR
CONTACTS FOR REMOTE
ALARM CIRCUITS
(MODIFICATION -EC)

IOTE: CONTROL AND ALARM TERMINALS FOR CUSTOMER
CONNECTIONS REQUIRE 3.5MM SLOTTED SCREW DRIVER

-NOTE-ENGINE START CONTACT RATING 1/2 AMP, 30VDC

TERMINAL WIRE CAPACITY								
TERMINAL TYPE	WIRE SIZE							
CONTROL AND ALARM TERMINALS	#14-12 AWG [2.5-4 MM ²]							

-NOTE-ALARM CONTACT RATING PILOT DUTY 240 VAC, 28 VDC 5 AMP MAX. LOAD

_ +	SIZE A	BY	DATE	
THIRD ANGLE	DRAWN BY TEF		05-06-10	
PROJECTION	FINAL APPROVAL	TEF	05-06-10	

Firetrol, Inc.
© Firetrol, Inc. Not for construction.


UPDATED TITLE BLOCK	D 281357 JMW TEF 10-						
REVISED LINE TERMINAL CHART, CHANGED	С	C 270091 TEF TEF 11					
REVISION DESCRIPTION	REV	APP	DATE				
FIELD CONNECTIONS	DRAWING NUMBER FC950-55						
POWER TRANSFER SWITCH FOR GENE OR SECOND UTILITY POWER SOURCE	DWG - FON				HEET 1 OF 1		



Mark IIxe Electric Fire Pump Controllers

Typical Motor Connection Diagram FTA1300 / FTA1350

Wye-Delta Starting (12-Lead Motors)

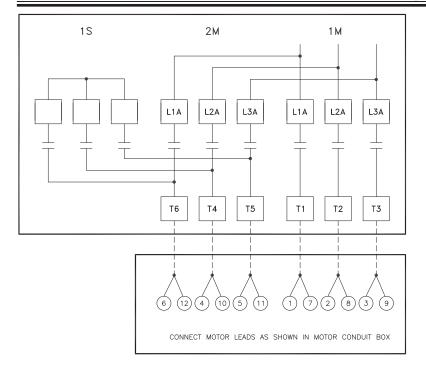

FOR SINGLE VOLTAGE 12-LEAD WYE-DELTA MOTORS


- OR -

FOR DUAL VOLTAGE WYE-DELTA MOTORS CONNECTED TO OPERATE ON THE LOWER OF THE TWO VOLTAGES 200-208 FOR 200/400V RATED MOTORS OR 220-240 FOR 230/460V RATED MOTORS.

SIX (6) WIRES REQUIRED BETWEEN MOTOR AND CONTROLLER.

IMPORTANT:

THIS DRAWING IS FOR GENERAL INFORMATION ONLY. REFER TO MOTOR CONNECTION DIAGRAM FOR SPECIFIC WIRING ARRANGEMENT.

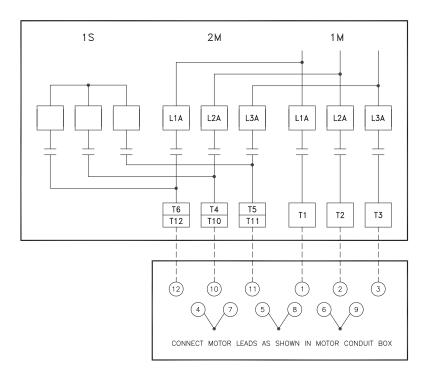

FOR DUAL VOLTAGE WYE-DELTA MOTORS CONNECTED TO OPERATE ON THE *HIGHER* OF THE TWO VOLTAGES 440-480 FOR 230/460V RATED MOTORS OR 380-415 FOR 200/400V RATED MOTORS.

SIX (6) WIRES REQUIRED BETWEEN MOTOR AND CONTROLLER.

NOTES:

- 1. THREE (3) LEAD AND NINE (9) LEAD MOTORS *CANNOT* BE USED FOR WYE-DELTA STARTING.
- 2. TWELVE (12) LEAD PART
 WINDING MOTORS CANNOT BE
 USED FOR WYE-DELTA STARTING
 AT 240/230V.

B 280820 JMW TEF 09-12-19

						ADDED SINGLE VOLTAGE, 12 LEAD, Y-D MO	TORS	А	-	TEF	TEF	11-22-00	
Γ		SIZE A	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	BY	APP	DATE	
	\Rightarrow	DRAWN BY	JMW	09-12-95	Firetrol, Inc.	MOTOR CONNECTIONS	FTA1300 / FTA1350	DRAWING NUMBER - NS1300-01					
	THIRD ANGLE PROJECTION	FINAL			© Firetrol, Inc. Not for construction.	OPEN/CLOSED TRANSITION WYE-DELT	A FIRE PUMP CONTROLLERS		1	_	\top		
L		APPROVAL		09-12-95	Subject to change without notice.				NO 28			IEET 1 OF 1	

UPDATED TITLE BLOCK

RAWING NUMBER

WS1350-55

DWG E ECN 280937

FTA1350 WITH FTA950

CLOSED TRANSITION WYE-DELTA FIRE PUMP CONTROLLER

REVISION DESCRIPTION

WIRING SCHEMATIC


WITH POWER TRANSFER SWITCH

Firetrol, Inc.

Subject to change without notice.

05-10-02



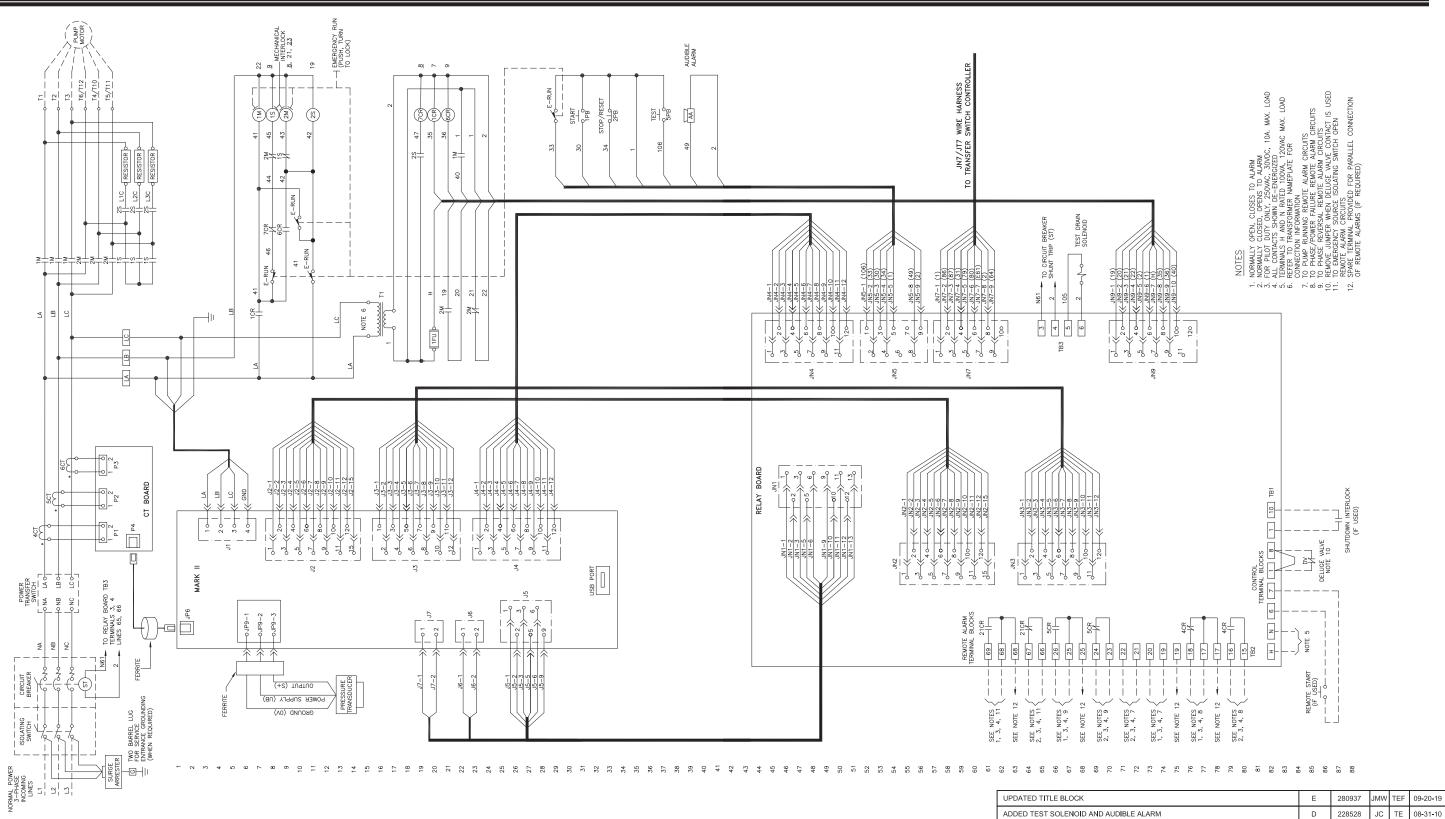


THIRD ANGLE PROJECTION



Wiring Schematic FTA950

Assembled With Electric Fire Pump Controllers

JMW TEF 10-16-19

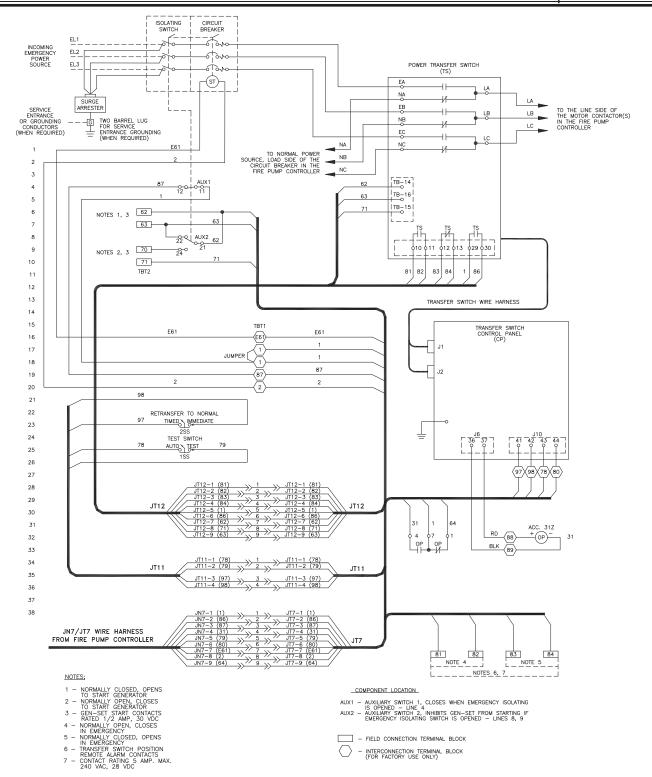

					UPDATED TO COMPLY WITH NEW FM STANDARD			228528	JC	TEF	08-31-10	
	SIZE A	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	BY	APP	DATE	
				Firetrol, Inc.	WIRING SCHEMATIC	FTA950	DRAWING NUMBER					
THIRD ANGLE	DRAWN BY	TEF	05-25-10	[] - 1100101, 11101	FIDE DUMP DOWER TRANSFER SWITCH FOR CEN SET			− WS950 - 55				
PROJECTION	FINAL APPROVAL	TEF	05-25-10	© Firetrol, Inc. Not for construction. Subject to change without notice.	FIRE PUMP POWER TRANSFER SWITCH FOR GEN-SET AND SECOND UTILITY POWER SOURCE		DWG B	ECN 28	1357	SH	EET 1 OF 1	
All rights reserved. The	drawing and the in	formation co	ntained or depicted h	erein are the sole property of Firetrol. Inc. Copies are communicated to the re	cipient in strict confidence and may not be retransmitted, published, reproduced, cop	ied or used in any manon including as the basis for the manufacture or	sale of any produ	ds without the exc	ress prior	vritten con	sent of Firetrol Inc.	

UPDATED TITLE BLOCK