

Submittal Package FTA1000

Across The Line Starting

STANDARD WITHSTAND RATINGS 200-600V - 100,000 Amps RMS Sym. INTERMEDIATE WITHSTAND RATINGS 200-600V - 150,000 Amps RMS Sym. HIGH WITHSTAND RATINGS 200-600V - 200,000 Amps RMS Sym.

LINE VOLTAGE	MOTOR HORSEPOWER
200	□ 75–100
208	□ 75−125
220-240	□ 75−125
380-415	□ 125–200
440-480	□ 200–250
550-600	□ 200−300

(DRAWINGS INCLUDED IN THIS PACKAGE ARE FOR STANDARD CONTROLLERS. ACTUAL "AS BUILT" DRAWINGS MAY DIFFER FROM THOSE SEEN HERE).

Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P 919 460-5200 F 919 460 5250 www.firetrol.com

While every precaution has been taken to ensure accuracy and completeness herein, Firetrol, Inc. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications and drawings are subject to change without notice. ©2019 Firetrol, Inc., All Rights Reserved.

Firetrol Mark IIxg Electric Fire Pump Controller

FTA1000 - Full Voltage Starting

Specifications

1.0 Main Fire Pump Controller

The main fire pump controller shall be a factory assembled, wired and tested unit. The controller shall be of the combined manual and automatic type designed for full voltage starting of the fire pump motor having the horsepower, voltage, phase and frequency rating shown on the plans and drawings.

1.1 Standards, Listings & Approvals

The controller shall conform to all the requirements of the latest editions of: NFPA 20, Standard for the Installation of Stationary Pumps for Fire Protection NFPA 70, National Electrical Code.

The controller shall be listed by:

Underwriters Laboratories, Inc., in accordance with UL218, *Standard for Fire Pump Controllers* Canadian Standards Association CSA-C22.2, Standard for Industrial Control Equipment (cUL)

CE - Low Voltage Directive

The controller shall be approved by:

Factory Mutual (IEC 62091)

The City of New York for fire pump service

1.2 Enclosure

The controller components shall be housed in a NEMA Type 2 (IEC IP22) drip-proof, wall mounted enclosure.

1.3 Withstand Ratings (Short Circuit Current Ratings)

All controller components shall be front mounted, wired and front accessible for maintenance. The minimum withstand rating of the controllers shall not be less than 100,000 Amps RMS Symmetrical at 200–600 Volts*. If the available system fault current exceeds these ratings, the controllers shall be supplied with a withstand rating of 150,000 or 200,000 Amps RMS Symmetrical, as required.

*Note: 100,000 Amp withstand rating not available in some larger horsepowers. Consult factory for details.

1.4 Isolation Switch and Circuit Breaker

The controller shall include a motor rated combination isolating disconnect switch/circuit breaker, mechanically interlocked and operated with a single, externally mounted handle. When moving the handle from OFF to ON, the interlocking mechanism shall sequence the isolating disconnect switch ON first, and then the circuit breaker. When the handle is moved from ON to OFF, the interlocking mechanism shall sequence the circuit breaker OFF first, and then the isolating disconnect switch.

The isolating disconnect switch/circuit breaker shall be mechanically interlocked so that the enclosure door cannot be opened with the handle in the ON position except by a hidden tool operated bypass mechanism. The isolating disconnect switch/circuit breaker shall be capable of being padlocked in the OFF position for installation and maintenance safety, and shall also be capable of being locked in the ON position without affecting the tripping characteristics of the circuit breaker. The controller door shall have a locking type handle and three point cam and roller vault type hardware. The circuit breaker trip curve adjustment shall be factory set, tested and sealed for the full load amps of the connected motor. The circuit breaker shall be capable of being field tested to verify actual pick up, locked rotor, and instantaneous trip points after field installation without disturbing incoming line and load conductors.

1.5 Operator Interface

The fire pump controller shall feature an operator interface with user keypad. The interface shall monitor and display motor operating conditions, including all alarms, events, and pressure conditions. All alarms, events, and pressure conditions shall be displayed with a time and date stamp. The display shall be a 128x64 Backlit LCD capable of customized graphics. The display and interface shall be NEMA rated for Type 2, 3R, 4, 4X, and 12 protection and shall be fully accessible without opening the controller door. The display and user interface shall utilize multiple levels of password protection for system security. A minimum of 3 password levels shall be provided.

1.6 Ammeter/Voltmeter

The fire pump controller operator interface shall be capable of displaying true RMS digital motor voltage and current measurements for all three phases simultaneously. Displays requiring push-button and selector switches to toggle between phases or current and voltage shall not be accepted.

Voltage and current shall be measured by True RMS technology to provide the most accurate measurement for all sine waves, including non-sinusoidal waveforms. Average responding meters will not be accepted.

1.7 Digital Status/Alarm Messages

The digital display shall indicate text messages for the status and alarm conditions of:

Motor On

Sequential Start Time

 Minimum Run Time Remote Start

Local Start / Off Delay Time

Under VoltageOver FrequencyDrive Not Installed

Printer Error

Fail to Start
Over Voltage
Emergency Start
Motor Overload
Disk Near Full
System Battery Low
Locked Rotor Trip
Motor Over 320%
Disk Error
Pressure Error

Disk Near Full

Pressure Error

as numeric values reflecting the value of the remaining time.

The Sequential Start Timer and Minimum Run Timer/Off Delay Timer shall be displayed

1.8 LED Visual Indicators

LED indicators, visible with the door closed, shall indicate:

Power Available
 Alarm
 Pump Running

Remote Start

Transfer Switch Normal

• Transfer Switch Emergency

Phase Reversal
Motor Overload
Overvoltage
Interlock On
Emerg. Iso. Switch Off
Automatic Shutdown Disabled
Undervoltage

Deluge Open

System Pressure Low

Phase Failure

1.9 Data Logging

The digital display shall monitor the system and log the following data:

Motor Calls/Starts

Pump Total Run Time

Pump Last Run Time

• Last Pump Start

 Total Controller Pwr On Time Min/Max System Pressure

Last Phase Fail/Reversal

Last Locked Rotor Trip
 Last Locked Rotor Current
 Min/Max Frequency

Max Starting Currents
 Max Run Currents

Min/Max Voltage per Phase while idle (not running)
 Min Voltage per Phase during

Min/Max Voltage per Phase during Run

2.0 Event Recording

Memory - The controller shall record all operational and alarm events to system memory. All events shall be time and date stamped and include an index number. The system memory shall have the capability of storing 3000 events and allow the user access to the event log via the user interface. The user shall have the ability to scroll through the stored messages in groups of 1 or 10.

2.1 USB Host Controller

The controller shall have a built-in USB Host Controller. A USB port capable of accepting a USB Flash Memory Disk shall be provided. The controller shall save all operational and alarm events to the flash memory on a daily basis. Each saved event shall be time and date stamped. The total amount of historical data saved shall solely depend on the size of the flash disk utilized. The controller shall have the capability to save settings and values to the flash disk on demand via the user interface.

2.2 Serial Communications

The controller shall feature a RS485 serial communications port for use with 2 or 4 wire Modbus RTU communications.

2.3 Solid State Pressure Transducer

The controller shall be supplied with a solid state pressure transducer with a range of 0-300 psi (0-20.7 bar) ±1 psi. The solid state pressure switch shall be used for both display of the system pressure and control of the fire pump controller. Systems using analog pressure devices or mercury switches for operational control will not be accepted. The START, STOP and SYSTEM PRESSURE shall be digitally displayed and adjustable through the user interface. The pressure transducer shall be mounted inside the controller to prevent accidental damage. The pressure transducer shall be directly pipe mounted to a bulkhead pipe coupling without any other supporting members. Field connections shall be made externally at the controller coupling to prevent distortion of the pressure switch element and mechanism.

2.4 Seismic Certification

The controller shall be certified to meet or exceed the requirements of the 2012 International Building Code and the 2013 California Building Code for Importance Factor 1.5 Electrical Equipment for Sds equal to 1.88 or less severe seismic regions. Qualifications shall be based upon successful tri-axial shake-table testing in accordance with ICC-ES AC-156. Certification without testing shall be unacceptable. Controller shall be clearly labeled as rated for installation in seismic areas and a Certificate of Conformance shall be provided with the controller.

NOTE: Not available on Model FTA1500 Controllers

2.5 Controller Operation

A digitally set On Delay (Sequential Start) timer shall be provided as standard. Upon a call to start, the user interface shall display a message indicating the remaining time value of the On Delay timer.

The controller shall be field programmable for manual stop or automatic stop. If set for automatic stopping, the controller shall allow the user to select either a Minimum Run Timer or an Off Delay Timer. Both timers shall be programmable through the user interface.

A nonadjustable restart delay timer shall be provided to allow the residual voltage of the motor to decay prior to restarting the motor. At least 2 seconds, but no more than 3 seconds, shall elapse between stopping and restarting the pump motor.

A weekly test timer shall be provided as standard. The controller shall have the ability to program the time, date, and frequency of the weekly test. In addition, the controller

shall have the capability to display a preventative maintenance message for a service inspection. The message text and frequency of occurrence shall be programmable through the user interface.

A Lamp Test feature shall be included. The user interface shall also have the ability to display the status of the system inputs and outputs.

An Audible Test feature shall be included to test the operation of the audible alarm device.

The controller shall not start the fire pump motor under a single-phase condition. If the motor is already running when a phase loss occurs, the controller shall continue to run the motor, but still display a Phase Failure alarm.

The fire pump controller software shall be automatically upgraded through the USB port by simply inserting a flash disk with the new software. Fire pump controllers that require laptop computers, handheld equipment or specialized devices for software upgrades shall be prohibited.

2.6 Manufacturer

The controller shall be a Firetrol brand.



Mark Ilxg Electric Fire Pump Controllers

Product Description FTA1000

Across The Line Starting



Description – Firetrol® FTA1000 Full Voltage Fire Pump Controllers are intended for use with electric motor driven fire pumps where the capacity of the power source permits full voltage starting. Full voltage is applied to the motor as soon as the controller is actuated. The controller monitors, displays and records fire pump system information.

Full voltage starting is simple and low cost and is preferred whenever the utility or emergency generator set will permit this type of starting.

Approvals – Firetrol fire pump controllers are listed by Underwriters' Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers, CSA, Standard for Industrial Control Equipment, and approved by Factory Mutual. They are built to meet or exceed the requirements of the approving authorities as well as NEMA and the latest editions of NFPA 20, *Instal*lation of Centrifugal Fire Pumps, and NFPA 70, National Electrical Code.

Standard Features – The following are included as standard with each controller:

- Voltage surge protector
- Main Disconnect Switch sized for connected motor horsepower and voltage
- Fire pump Circuit Breaker
- Single handle Isolating Disconnect Switch/ Circuit Breaker mechanism
- Motor contactor
- Emergency Manual Run Mechanism to mechanically close motor contactor contacts in an emergency condition

- Built-in Start and Stop push-buttons to bypass automatic start circuits Minimum Run Timer / Off Delay Timer
- Daylight Savings Time Option
- Weekly Test Timer
- Elapséd Time Meter
- Door mounted display/interface panel featuring a 128 x 64 pixel backlit LCD Graphical Display, Membrane Type User Control Pushbuttons and easy to read LED Indicators for:
 - POWER AVAILABLE
 - ALARM
 - TRANSFER SWITCH NORMAL (If unit ordered with Automatic Power Transfer Switch)
 TRANSFER SWITCH EMERGENCY (If unit ordered)
 - with Automatic Power Transfer Switch)
 - SYSTEM PRESSURE LOW
 - PUMP RUNNING
 - DELUGE OPEN
 - REMOTE START
 - INTERLOCK ON
 - FAIL TO START
 - MOTOR OVERLOAD
 - EMERGENCY ISO SWITCH OFF (If unit ordered with Automatic Power Transfer Switch)
 - PHASE FAILURE
 - PHASE REVERSAL
 - AUTOMATIC SHUTDOWN DISABLED
 - OVERVOLTAGE
 - UNDERVOLTAGE
- Digital Pressure Display
- USB Host Controller and Port
- Solid State Pressure Transducer
- Data Log
- Event Log (3000 Events)
- True RMS Metering with simultaneous 3 Phase Display of Amps, Volts, Frequency, Pressure and Alarm Messages
- Disk Error message
- Disk Near Full message
- Pressure Error message Motor Over 320% message Local Start message
- Remote Start message
- Emergency Start message
- Fail To Start message
- Undervoltage message
- Overvoltage message
- NEMA Type 2 (IEC IP22) enclosure
- Suitable for use as Service Equipment Each standard controller comes with user configurable options for:
 - Interlock Alarm Low Pressure Audible
 - Pump Run Low Suction
 - User Defined Input
- Weekly Test

SPECIAL ENCLOSURES

- -E Enclosure, NEMA Type 4 (IP66), Painted Steel
- -F Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, Brushed Finish
- -FD Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Brushed Finish
- -FDB Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, 12 Gauge, Seam-Welded, Brushed Finish
- -FDP Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Painted Finish
- -FXP Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, Painted Finish
- -G Enclosure, NEMA Type 12 (IP54), Painted Steel
- -T Enclosure, NEMA Type 3R (IP24), Painted Steel

CIRCUIT BREAKER OPTION

- -N Intermediate withstand rating 150,000 Amps RMS Sym.
- -P High withstand rating 200,000 Amps RMS Sym

Note: Intermediate and High withstand ratings may not be available for all horsepowers and voltages. Consult factory for availability.

ANTI-CONDENSATION SPACE HEATERS

- -H Space Heater, 120V Externally Powered with Circuit Breaker
- -J Space Heater, 120V Externally Powered with Circuit Breaker and Thermostat
- -K Space Heater, 120V Externally Powered with Circuit Breaker and Humidistat
- Space Heater, 240V Externally Powered with Circuit Breaker
- -M Space Heater, 240V Externally Powered with Circuit Breaker and Thermostat
- -N Space Heater, 240V Externally Powered with Circuit Breaker and Humidistat

PRESSURE TRANSDUCERS

- -B Wetted Parts Including Pressure Sensor, 600 psi (42 Bar) Fresh Water
- -C Wetted Parts Including Pressure Sensor, 300 psi (21 Bar) Sea Water
- -D Wetted Parts Including Pressure Sensor, 600 psi (42 Bar) Fresh Water

COMBINED AUTOMATIC POWER TRANSFER SWITCHES

- -TSA FTA950 Automatic Transfer Switch, Group 5
- -TSAB FTA951 Automatic Transfer Switch, J-Bypass Isolation, Group 5

ALARMS

- -AC Alarm Output Contacts Extra, Pump Operating (1 Form A, 1 Form B)
- -AF Alarm, Audible/Visible, Low Pump Room Temperature
- -AG Alarm, Audible/Visible, Reservoir Low
- -AH Alarm, Audible/Visible, Low Suction Pressure
- -AM Alarm Output Contacts, Fail to Start
- -AV Alarm Output Contacts, Low Pump Room Temperature (Requires option -AF)
- -AW Alarm Output Contacts, Reservoir Low (Requires option -AG)
- -AY Alarm Output Contacts, Low Suction Pressure (Requires option -AH)

- -BW Alarm Output Contacts, Phase Failure/Phase Reversal
- -BY Alarm Output Contacts, Pump Overload
- -COM Alarm, Audible/Visible/Output Contacts, Low Suction Pressure with Manual Reset Option, Pressure Switch Not Included (Do Not Use Options AH or AY)
- -CTS Alarm, Audible/Visible/Output Contacts, Low Suction Pressure Shutdown with Manual Reset Option and Pressure Switch (Do Not Use Options AH or AY)
- -EG Alarm, Audible/Visible, Relief Valve Discharge
- -EH Alarm Output Contacts, Relief Valve Discharge (Requires option -EG)
- -EJ Alarm, Audible/Visible, Flow Meter On
- -EK Alarm Output Contacts, Flow Meter On (Requires option -EJ)
- -KH Alarm Output Contacts, Common Alarm -JR Visible Indicator, Jockey Pump Operating
- -JT Alarm, Audible/Visible, Built-In 120V Superviso
 - P Alarm, Audible/Visible, Built-In 120V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)
- -PE Alarm Output Contacts, Low System Pressure (pump on demand)
- -PT Älarm, Audible/Visible, Built-in 240V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)

MISCELLANEOUS

- -AZ Thermostat, Low Pump Room Temperature, Mounted and Wired
- Output Contacts, Load Shed (Selectable power source and adjustable time delay to remove noncritical loads before starting)
- -EL Series Pumping Operation, High Zone Controller
- -EM Series Pumping Operation, Mid Zone Controller -EN Series Pumping Operation, Low Zone Controller
- -FZX Rating, Nameplate to be marked 380-400V (Use
- with voltage code 'F' or 'FZ')
- Heart Marking, CE with External Wet Parts (Requires NEMA Type 12 (1P54) Enclosure as minimum)
 Heart Marking, CE with Internal Wet Parts (Requires NEMA New York)
- -IECI Marking, CE with Internal Wet Parts (Requires NEMA Type 12 (IP54) Enclosure as minimum)
- -OSP OSHPD Seismic Certification (State of California) (Requires Option -SEI)
- -MZN Neutral Lug, Service Entrance, Non-insulated Bonded to Enclosure
- -PK Terminal Blocks, Extra Remote Start
- -PY Output Contacts, Motor Space Heater Circuit, Externally Powered
- -S Tropicalization
- -SEI Marking, Seismic Certified (in accordance with IBC) (Note: Not available on model FTA1500)
- -USBX Data Port, External USB
- -ZPA Scheduled Service Message (when factory programmed or programmed by Firetrol representative during start-up)
- -ZPM Data Port, Serial Modbus RTU Over 2-Wire or 4-Wire RS485
- -ZPN Data Port, Serial Modbus RTU Over Ethernet TCP/IP

Export packaging (Wooden crating to conform to IPPC Standards) FTA1000 - 1930

Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com



Model Number Selection Guide

FTA1000 - FTA1930

Mark IIxe Electric Fire Pump Controllers

FTA1000, 1250, 1300, 1350, 1500, 1800, 1930 ELECTRIC FIRE PUMP CONTROLLERS Example: FTA1300-AM75HH-xx

Starting Method

1000 - Across-the-line (direct on line)

1250 - Part Winding (50%-50% windings)

1300 - Wye-delta (star-delta), open transition

1350 - Wye-delta (star-delta), closed transition

1500 - Primary resistor

1800 - Autotransformer

1930 - Digital Solid-state soft start/stop

Start/Stop Options

- A Automatic start with timed permissive stop after minimum run time and manual start with manual stop, field convertible to automatic start and manual start with manual stop only
- B Automatic start and manual start with manual stop
- C Manual start and stop

Short Circuit Current Rating

- M Standard short circuit rating 100,000 Amperes RMS Sym. at 200 - 600 V
- N Intermediate short circuit rating 150,000 Amperes RMS Sym. at 200 - 600 V
- P High short circuit rating 200,000 Amperes RMS Sym. at 200 600 V
- Q Standard intermediate short circuit rating 65,000 Amperes RMS Sym. at 550 600 V
- R Standard low short circuit rating 42,000 Amperes RMS Sym. at 550 - 600 V

Horsepower Rating

03 - 3 HP	100 - 100 HP
05 - 5 HP	125 - 125 HP
07 - 7 1/2 HP	150 - 150 HP
10 - 10 HP	200 - 200 HP
15 - 15 HP	250 - 250 HP
20 - 20 HP	300 - 300 HP
25 - 25 HP	350 - 350 HP
30 - 30 HP	400 - 400 HP
40 - 40 HP	450 - 450 HP
50 - 50 HP	500 - 500 HP
60 - 60 HP	600 - 600 HP
75 - 75 HP	700 - 700 HP

Modifications
See Back

Three Phase Voltage

A - 220-240 Volt, 60 Hertz (230 V)

AZ - 220-230 Volt, 50 Hertz

B - 440-480 Volt, 60 Hertz (460 V)

BZ - 415 Volt, 50 Hertz

C - 550-600 Volt, 60 Hertz (575 V)

F - 380 Volt, 60 Hertz

FZ - 380 Volt, 50 Hertz

H - 208 Volt, 60 Hertz

HH - 200 Volt, 60 Hertz

Model Number Selection Guide – Options & Modifications

SPECIAL ENCLOSURES

- Enclosure, NEMA Type 4 (IP66), Painted Steel
- -F Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, **Brushed Finish**
- Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, **Brushed Finish**
- -FDB Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, 12 Gauge, Seam-Welded, Brushed Finish
- -FDP Enclosure, NEMA Type 4X (IP66), #316 Stainless Steel, Painted Finish
- Enclosure, NEMA Type 4X (IP66), #304 Stainless Steel, -FXP Painted Finish
- Enclosure, NEMA Type 12 (IP54), Painted Steel -G
- Enclosure, NEMA Type 3R (IP24), Painted Steel -T

CIRCUIT BREAKER OPTION

- Intermediate withstand rating 150,000 Amps RMS Sym.
- -P High withstand rating 200,000 Amps RMS Sym
- Note: Intermediate and High withstand ratings may not be available for all horsepowers and voltages. Consult factory for availability.

ANTI-CONDENSATION SPACE HEATERS

- -H Space Heater, 120V Externally Powered with Circuit
- Space Heater, 120V Externally Powered with Circuit -, J Breaker and Thermostat
- -K Space Heater, 120V Externally Powered with Circuit Breaker and Humidistat
- Space Heater, 240V Externally Powered with Circuit -1 Breaker
- Space Heater, 240V Externally Powered with Circuit -M Breaker and Thermostat
- -N Space Heater, 240V Externally Powered with Circuit Breaker and Humidistat

PRESSURE TRANSDUCERS

- 0-600 psi (0-42.25 bar) Pressure Transducer for -B Fresh Water Service
- 0-300 psi (0-21.1 bar) Pressure Transducer for -C Copper Corrosive Service
- -D 0-600 psi (0-42.25 bar) Pressure Transducer for Corrosive Service

COMBINED AUTOMATIC POWER TRANSFER SWITCHES

- FTA950 Automatic Transfer Switch, Group 5
- FTA951 Automatic Transfer Switch, J-Bypass Isolation, Group 5

ALARMS

- Alarm Output Contacts Extra, Pump Operating (1 -AC Form A, 1 Form B)
- Alarm, Audible/Visible, Low Pump Room Temperature -AF
- Alarm, Audible/Visible, Reservoir Low -AG
- -AH Alarm, Audible/Visible, Low Suction Pressure
- Alarm Output Contacts, Fail to Start -AM
- -AV Alarm Output Contacts, Low Pump Room Temperature (Requires option -AF)
- -AWAlarm Output Contacts, Reservoir Low (Requires option -AG)
- -AY Alarm Output Contacts, Low Suction Pressure (Requires option -AH)

- -BW Alarm Output Contacts, Phase Failure/Phase Reversal
- Alarm Output Contacts, Pump Overload -BY
- Alarm, Audible/Visible/Output Contacts, Low Suc--COM tion Pressure with Manual Reset Option, Pressure Switch Not Included (Do Not Use Options AH or AY)
- -CTS Alarm, Audible/Visible/Output Contacts, Low Suction Pressure Shutdown with Manual Reset Option and Pressure Switch (Do Not Use Options AH or AY)
- -EG Alarm, Audible/Visible, Relief Valve Discharge
- Alarm Output Contacts, Relief Valve Discharge -EH (Requires option -EG)
- -FI Alarm, Audible/Visible, Flow Meter On
- Alarm Output Contacts, Flow Meter On (Requires -EK
- -KH Alarm Output Contacts, Common Alarm -JR Visible Indicator, Jockey Pump Operating
- Alarm, Audible/Visible, Jockey Pump Trouble -JT
- Alarm, Audible/Visible, Built-In 120V Supervisory Sys--P tem (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)
- -PE Alarm Output Contacts, Low System Pressure (pump on demand)
- -PT Alarm, Audible/Visible, Built-in 240V Supervisory System (Includes visible supervisory voltage normal indication and audible pump operating, phase failure and phase reversal indication)

MISCELLANEOUS

- Thermostat, Low Pump Room Temperature, Mount--AZ ed and Wired
- -FD Output Contacts, Load Shed (Selectable power source and adjustable time delay to remove noncritical loads before starting)
- -FI Series Pumping Operation, High Zone Controller
- Series Pumping Operation, Mid Zone Controller Series Pumping Operation, Low Zone Controller -FM
- -FN
- -FZX Rating, Nameplate to be marked 380-400V (Use with voltage code 'F' or 'FZ')
- -IEC Marking, CE with External Wet Parts (Requires NEMA Type 12 (IP54) Enclosure as minimum)
- Marking, CE with Internal Wet Parts (Requires NEMA -IECI Type 12 (IP54) Enclosure as minimum)
- -OSP OSHPD Seismic Certification (State of California) (Requires Option -SEI)
- Neutral Lug, Service Entrance, Non-insulated -MZN Bonded to Enclosure
- -PK Terminal Blocks, Extra Remote Start
- -PY Output Contacts, Motor Space Heater Circuit, Externally Powered
- Tropicalization -S
- -SFI Marking, Seismic Certified (in accordance with IBC) (Note: Not available on model FTA1500)
- Data Port, External USB -USBX
- -ZPA Scheduled Service Message (when factory programmed or programmed by Firetrol representative during start-up)
- -ZPM Data Port, Serial Modbus RTU Over 2-Wire or 4-Wire
- -ZPN Data Port, Serial Modbus RTU Over Ethernet TCP/IP

Export packaging (Wooden crating to conform to IPPC Standards) FTA1000 - 1930


Firetrol, Inc.


3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250

General Starting Configuration FTA1000

Across The Line Starting

Mark IIxe Electric Fire Pump Controllers

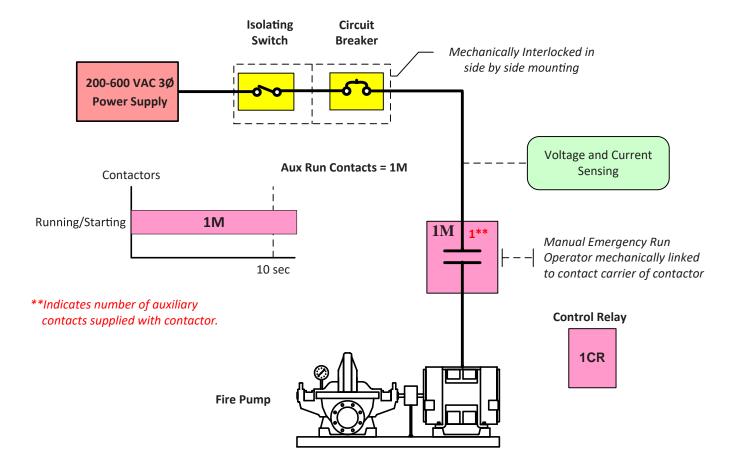

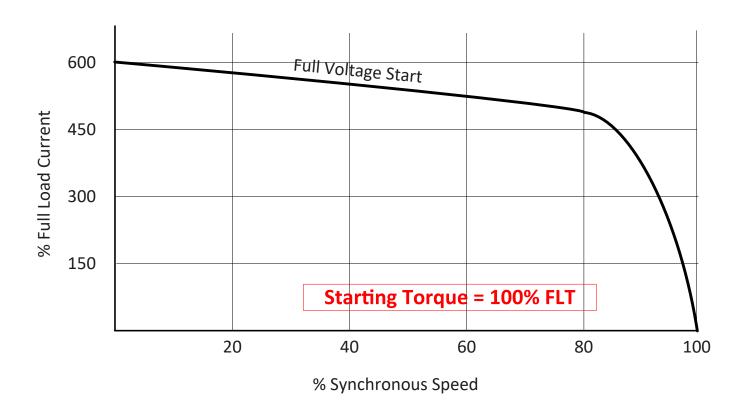

Firetrol, Inc.


3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com



Mark IIxg Electric Fire Pump Controllers

Dimensions and Shipping Weight FTA1000

Across The Line Starting

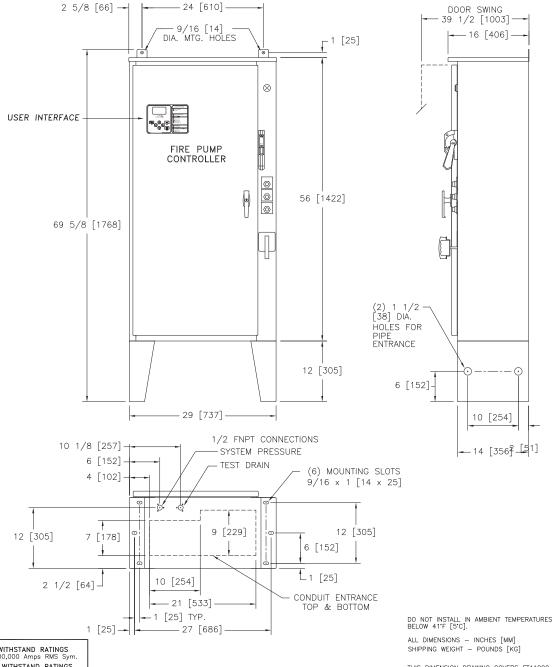

STANDARD WITHSTAND RATINGS 200-600V - 100,000 Amps RMS Sym. INTERMEDIATE WITHSTAND RATINGS 200-600V - 150,000 Amps RMS Sym. HIGH WITHSTAND RATINGS 200-600V - 200,000 Amps RMS Sym

LINE VOLTAGE	MOTOR HORSEPOWER
200	□ 75-100
208	□ 75-125
220-240	□ 75-125
380-415	□ 125-200
440-480	□ 200-250
550-600	□ 200-300

APPROXIMATE SHIPPING WEIGHT 235 [107]

UPDATED TITLE BLOCK

THIS DIMENSION DRAWING COVERS FTA1000 CONTROLLERS AT THE HORSEPOWER, VOLTAGE AND WITHSTAND RATINGS AS LISTED IN THE TABLE. FOR OTHER HORSEPOWER OR WITHSTAND RATINGS, REFER TO ED1000-02

SPECIFICATIONS AND DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE. DO NOT USE FOR CONSTRUCTION. REQUEST CONSTRUCTION DRAWINGS FROM FIRETROL OR YOUR LOCAL FIRETROL REPRESENTATIVE.

280404

JMW TEF 05-31-12

JMW TEF 08-19-19

DATE

SHEET 1 OF 1


						REVISED MOTOR HORSEPOWER CHART		С	237364	JM
		SIZE A	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	B,
	DRAWN BY	TEF	07-23-02	Firetrol. Inc.	DIMENSIONS & SHIPPING WEIGHT	FTA1000	DRAWING		_	
	THIRD ANGLE	DRAWNBY	31 TEF 07-2	07-23-02	-02	FULL VOLTAGE FIRE BUMP CONTROLLED			DD1000-55	
	FINAL APPROVAL	TEF	07-23-02	© Firetrol, Inc. Not for construction. Subject to change without notice.	FULL VOLTAGE FIRE PUMP CONTROLLER			DWG D ECN 2804		
Al righ	to manned The	drawing and the in	formation on	ntoined or denisted	bassis are the sale assessed of Firetral Inc. Copies are communicated to the re-	principle of the deligible of the contract of	period or used in one manor including on the basis for the manufacture or	and of any produ	to without the eve	20000



Field Connections FTA1000

Across The Line Starting

Mark IIxg Electric Fire Pump Controllers

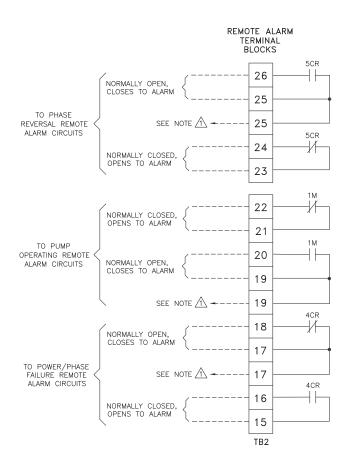


SPARE TERMINALS PROVIDED FOR PARALLEL CONNECTION OF REMOTE ALARMS (IF REQUIRED)

TERMINALS FOR CUSTOMER CONNECTIONS REQUIRE 3.5MM SLOTTED SCREW DRIVER

TERMINAL	TIGHTENING TOP	RQUE
TERMINAL TYPE	WIRE SIZE	TIGHTENING TORQUE
CONTROL AND ALARM TERMINALS	#14-12 AWG [2.5-4 MM ²]	5.6 lb-in [.6 Nm]


-NOTE-ALARM CONTACT RATING PILOT DUTY 250 VAC, 30 VDC 10 A. MAX. LOAD

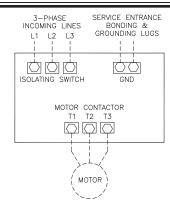

NOTES

- Incoming line terminals are provided to accommodate wire sizes at 125% of motor full load current per NFPA 70-2008, *National Electrical Code*, Table 430-250, Section 695.6(c), and Table 310-16, 75° rated Copper conductors.
- 2— Controller is phase rotation sensitive. Incoming lines L1, L2 and L3 must be in ABC, right hand rotation sequence for proper operation of the phase monitor.
- 3— Motor connections shown are typical. Since motor connections vary widely, refer to the motor connection diagram for specific wiring arrangement.
- 4- For Incoming line terminals and motor terminals field wire capacity refer to drawing FC1000-51

NOTE: USE COPPER CONDUCTORS ONLY FOR ALL CONNECTIONS

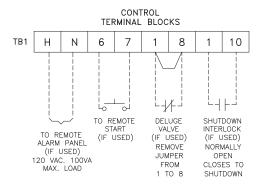

PRESSURE SYSTEM CONNECTION 1/2" FNPT

	SIZE A	BY	DATE	
THIRD ANGLE	DRAWN BY	TEF	04-26-02	Firetrol
PROJECTION	FINAL APPROVAL	TEF	04-26-02	© Firetrol, Inc. Not for con Subject to change without



UPDATED TITLE BLOCK	В	280404	JMW	TEF	09-09-19			
ADD NOTE FOR COPPER CONDUCTORS ON	Α	226253	JC	TEF	12-08-09			
REVISION DESCRIPTION	REV	ECN NO	BY	APP	DATE			
FIELD CONNECTIONS	DRAWING NUMBER FC1000-50							
FULL VOLTAGE FIDE BUILD CONTROL	LEB	FC1000 - 30						
FULL VOLTAGE FIRE PUMP CONTROI	DWG B	ECN 280	HEET 1 OF 2					

nricated to the recipient in strict confidence and may not be retransmitted, outlished, reproduced, copied or used in any manor, including as the basis for the manufacture or sale of any products, without the express prior written



Field Connections FTA1000


Mark IIxg Electric Fire Pump Controllers

Across The Line Starting

120/240 VAC POWER FOR

CONTROLLER

SPACE HEATER MODIFICATION -H, -J, -K, -L, -M, -N

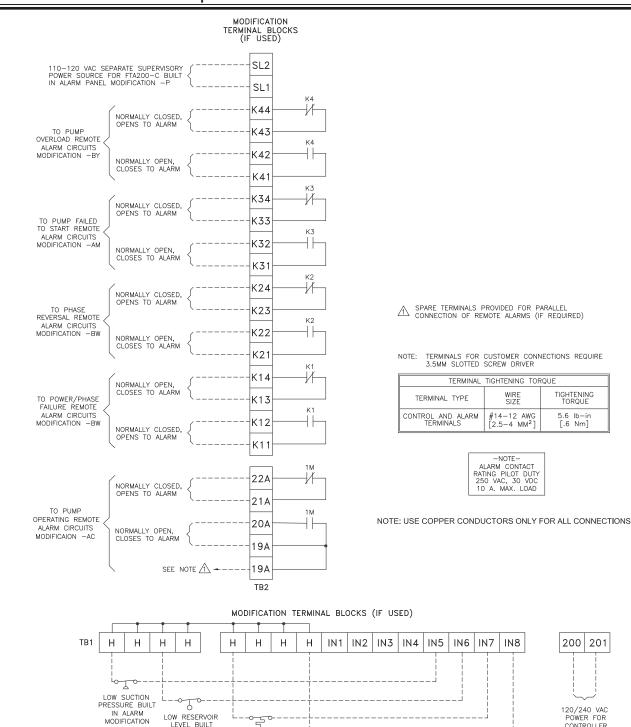

					UPDATED TITLE BLOCK		В	280404	JMW	TEF	09-09-19
					ADD NOTE FOR COPPER CONDUCTORS ONLY, UPDATED LOGO AND TITLE BLOCK			226253	JC	TEF	12-08-09
	SIZE A	BY	DATE		REVISION DESCRIPTION			ECN NO	BY	APP	DATE
	DRAWNBY TEE	WN BY TEF	04-26-02	F Firetrol, Inc.	FIELD CONNECTIONS	FTA1000	DRAWING NUMBER FC1000-50				
THIRD ANGLE			0 1 20 02		FULL VOLTAGE FIRE RUMP CONTROLLER			7 FC 1000 - 50			
PROJECTION FI	FINAL APPROVAL	TEF	04-26-02	© Firetrol, Inc. Not for construction. Subject to change without notice.	FULL VOLTAGE FIRE PUMP CONTRO	DWG B	ECN 280	0404	SH	HEET 2 OF 2	
All rights reserved. The	e drawing and the in	formation co	ntained or depicted I	erein are the sole property of Firetrol, Inc. Copies are communicated to the re	cipient in strict confidence and may not be retransmitted, published, reproduced,	, copied or used in any manor, including as the basis for the manufacture or	sale of any produ	cts, without the exp	ress prior	vritten con	sent of Firetrol, Inc.

RELIEF VALVE DISCHARGE BUILT IN ALARM MODIFICATION —EG

LOW RESERVOIR LEVEL BUILT IN ALARM

MODIFICATION

-AG

LOW PUMP ROOM
TEMPERATURE BUILT
IN ALARM
MODIFICATION —AF

-AH



Field Connections FTA1000

Across The Line Starting Line & Motor Wire Terminal Capacity

LINE TERMINALS-WIRE CAPACITY AND QUANTITY (CU) 1

					, ,		
(CU) SERVICE ENTI						WIRE SIZE SERVICE ENTRANCE (2)	
200V	208V	220-240V	380-415V	440-480V	550-600V	PER PHASE	GROUND LUG (CU)
20	20	25	40	50	60	(1) #14 AWG-#1/0 AWG (1) 2.5 MM ² -50 MM ²	(2) #14 AWG-#2/0 AWG (2) 2.5 MM ² -70 MM ²
40	40	40	75	100	125	(1) #4 AWG-300 kcmil (1) 25 MM ² -150 MM ²	(2) #14 AWG-#2/0 AWG (2) 2.5 MM ² -70 MM ²
60	60	60	100	150	150	(1) #4 AWG-300 kcmil (1) 25 MM ² -150 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²
100	100	100	150	250	300	(1) 250 kcmil-500 kcmil (1) 120 MM ² -240 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²
	125	125	200			(2) #3/0 AWG-250 kcmil (2) 95 MM ² -120 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²
200	200	250	350	500		(3) #2/0 AWG-400 kcmil (3) 70 MM ² -200 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²
250	250	300	500	600		(4) #4/0 AWG-500 kcmil (4) 100 MM ² -240 MM ²	(2) #6 AWG-250 kcmil (2) 16 MM ² -120 MM ²

MOTOR TERMINALS-WIRE CAPACITY AND QUANTITY (CU) (1

	MAX	WIRE SIZE (CU)				
200V	208V	220-240V	380-415V	440-480V	550-600V	PER PHASE
30	30	40	60	75	100	(1) #6 AWG-#2/0 AWG (1) 16 MM ² -70 MM ²
50	50	60	75	125	150	(1) #6 AWG-250 kcmil (1) 16 MM ² -120 MM ²
75	75	100	150	200	250	(1) #4 AWG-400 kcmil (1) 25 MM ² -200 MM ²
100	100			250	300	(2) #4 AWG-500 kcmil (2) 25 MM ² -240 MM ²
200	200	200	350	500		(2) 250 kcmil-500 kcmil (2) 120 MM ² -240 MM ²
250	250	300	500	600		(3) #2/0 AWG-500 kcmil (3) 70 MM ² -240 MM ²

- TO FOR CORRECT WIRE SIZING, REFER TO NATIONAL ELECTRICAL CODE, NFPA 70.
- WHEN REQUIRED BY AUTHORITY HAVING JURISDICTION.


					UPDATED LINE TERMIAL HP / VOLTAGE CHART CHANGED TO XT4 BREAKERS			270091	TEF	TEF	11/19/17
	SIZE A	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	BY	APP	DATE
THIRD ANGLE DRAWN BY	DDAWNIBY	/ JC 02-13-1	02-13-12	13-12	FIELD CONNECTIONS	FTA1000	DRAWING NUMBER				
	DIVAMINIBI	JC	02-13-12		FULL VOLTAGE FIRE DUMP CONTROLLED			FC1000-51			
PROJECTION FINAL APPROVAL TEF 02-13-13		02-13-12	© Firetrol, Inc. Not for construction. Subject to change without notice.	FULL VOLTAGE FIRE PUMP CONTROLLER LINE AND MOTOR FIELD WIRE TERMINAL CAPACITY		DWG E	ECN 280	0404	SH	HEET 1 OF 1	
All rights reserved. The	a drawing and the in	formation co	ntained or denicted	herein are the cole property of Firetral Inc. Copies are communicated to the re	cinient in strict confidence and may not be retransmitted, published, reproduced	Longiari or used in any manor, including so the basis for the manufacture or	cale of any produc	te without the eve	race prior	witten con	eant of Eirstrol Inc

ECN 280404

SHEET 1 OF 1





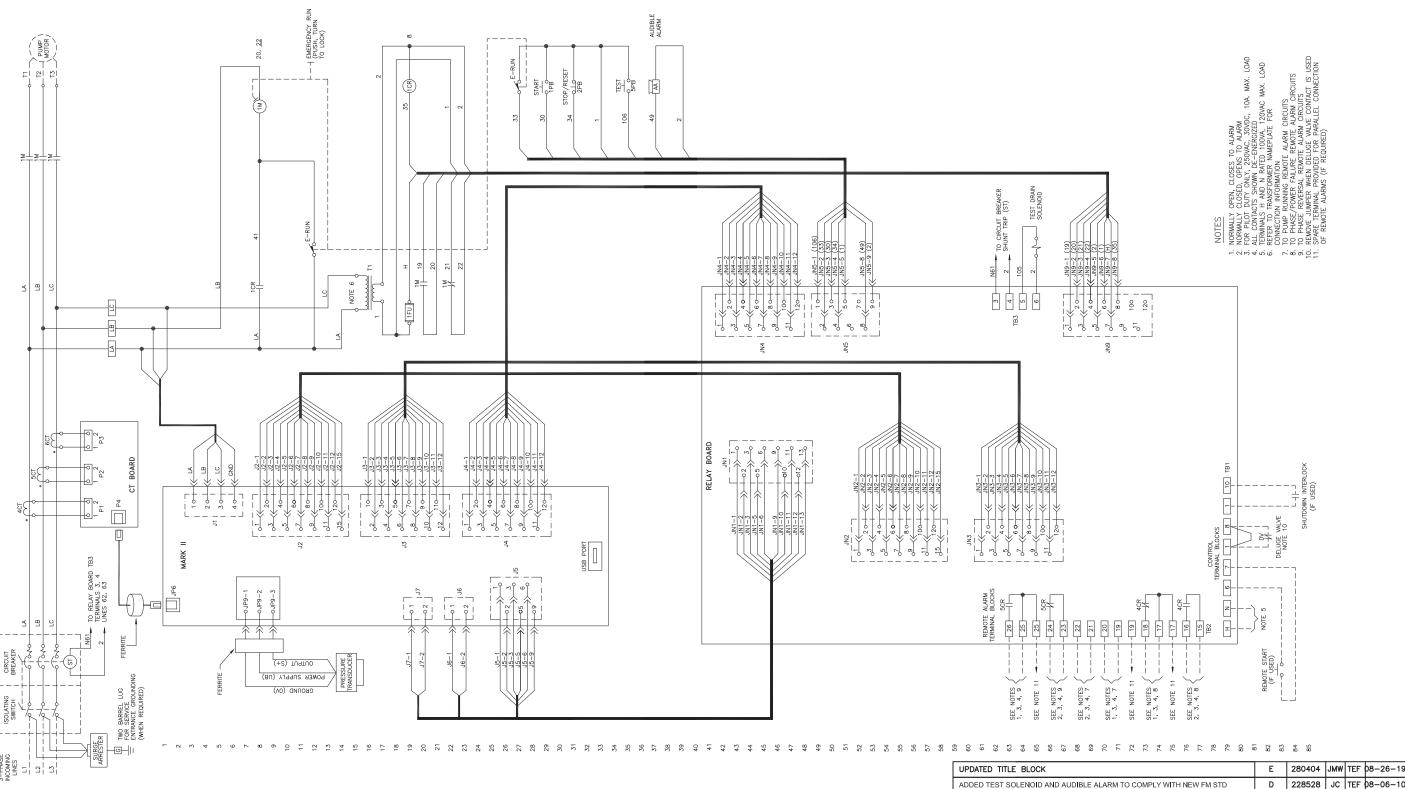

					ADDED TEST SOLENOID AND AUDIBLE ALARM TO COMPLY WITH NEW FM STD			228528	JC	
	SIZE B	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	BY	
	DRAWN BY	TEE	05-10-02	Firetrol, Inc.	WIRING SCHEMATIC	FTA1000	DRAWING N		<u> </u>	
THIRD ANGLE	Terrander TET 60 10 0				FULL VOLTAGE FIRE DUMP CONTROLLED			∤ WS1000-50		
PROJECTION	F IN AL APPROVAL	TEF	05-10-02	© Firetrol, Inc. Not for construction. Subject to change without notice.	FULL VOLTAGE FIRE PUMP CONTROLLER			ECN 280)404	