

MARKIII+ Electric Fire Pump Controller - Solid State Soft Starting With Power Transfer Switch

# **Project Information**

VOLTAGE/POWER TABLE				
LINE MOTOR VOLTAGE HORSEPOWER				
380-400-415	300			
440-480	350-400			
600	450-500			
APPROX SHIPPING WT: 1150 [522]				

DRAWINGS INCLUDED IN THIS PACKAGE ARE FOR STANDARD CONTROLLERS. ACTUAL "AS BUILT" DRAWINGS MAY DIFFER FROM THOSE SHOWN HERE.

# Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com

While every precaution has been taken to ensure accuracy and completeness herein, Firetrol, Inc. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications and drawings are subject to change without notice. ©2022 Firetrol, Inc., All Rights Reserved.

# Firetrol Mark<sup>III+</sup> Electric Fire Pump Controller

FTA1930/FTA950 - Solid State Reduced Current Starting with Power Transfer Switch Specifications

## 1.0 Main Fire Pump Controller

The main fire pump controller shall be a factory assembled, wired and tested unit. The controller shall be of the combined manual and automatic type designed for full voltage starting of the fire pump motor having the horsepower, voltage, phase and frequency rating shown on the plans and drawings. The controller shall be rated for an Ambient Temperature Operating Range of 39°F (4°C) to 104°F (40°C).

# 1.1 Standards, Listings & Approvals

The controller shall conform to all the requirements of the latest editions of: NFPA 20, Standard for the Installation of Stationary Pumps for Fire Protection NFPA 70, National Electrical Code.

The controller shall be listed by:

Underwriters Laboratories, Inc., in accordance with UL218, *Standard for Fire Pump Controllers* Canadian Standards Association CSA-C22.2, Standard for Industrial Control Equipment (cUL)

CE - Low Voltage Directive

The controller shall be approved by: Factory Mutual (IEC 62091) The City of New York for fire pump service

#### 1.2 Enclosure

The controller components shall be housed in a NEMA Type 2 (IEC IP22) drip-proof, wall mounted enclosure.

# 1.3 Withstand Ratings (Short Circuit Current Ratings)

All controller components shall be front mounted, wired and front accessible for maintenance. The available short circuit current ratings are shown below. The ratings shall apply to the normal and emergency power components.

Code	200-208V 2		20-240V 380-		-415V   440-48		80	550-600
	5-150 HP	5	5-200 HP	5-3	50 HP	5-400	ΗP	5-500 HP
M - Standard	100kA		100kA	10	0kA	100kA	7	N/A
N - Intermediate	150kA		150kA	15	0kA	150k <i>A</i>	7	N/A
P - High	200kA		200kA	20	0kA	200k	4	N/A
Q - Intermediate	N/A		N/A	N	I/A	N/A		100kA
R - Standard	N/A		N/A	N	I/A	N/A		50kA
	200-208V	/	220-24	.0V	380-	-415V	_	140-480
Code	200 HP		250-400	) HP	400-	500 HP	45	50-500 HP
M - Standard	50A		50kA	50kA 50		OkA		50kA
N - Intermediate	N/A		N/A		N	N/A		N/A
P - High	100kA		100kA		100kA		100kA	
Q - Intermediate	N/A		N/A		N/A			N/A
R - Standard	N/A		N/A	',		N/A		N/A

## 1.4 Power Components

The controller shall include a combination isolating disconnect switch/circuit breaker, rated for not less than 115% of the motor full load current, mechanically interlocked and operated with a single, externally mounted handle. The isolating disconnect switch/circuit breaker shall be mechanically interlocked so that the enclosure door cannot be opened with the handle in the ON position except by a hidden tool operated bypass mechanism. The isolating disconnect switch/circuit breaker shall be capable of being

padlocked in the OFF position for installation and maintenance safety, and shall also be capable of being locked in the ON position without affecting the tripping characteristics of the circuit breaker.

The controller will include a voltage surge arrestor and Solid State Reduced Current starting.

The controller shall be equipped with a single handle, manually operated, emergency start mechanism capable of being latched in the ON position.

The controller shall include an Automatic Transfer Switch, electrically or manually operated, mechanically held.

## 1.5 Operator Interface (HMI)

The operator interface shall be a 7.0" LCD capacitive type color touch screen (HMI technology) powered by an embedded microcomputer with software PLC logic. Included shall be keypad type push-buttons for START, STOP, RUN TEST and TRANSFER SWITCH TEST.

The screen shall include menus for: Home · Alarms · Configuration · History · Service · Manuals · Language.

The HMI shall graphically display the following: Voltage and Amperage of all 3 phases simultaneously using true RMS Technology for both the Normal and Alternate Power Sources · Transfer Switch Status · Motor Stopped/Running · Starting Cause · Actuation Mode · Controller Type · Shutdown Mode · Date & Time · Pump Room Temp. · System Pressure

System pressure shall be capable of being displayed as: PSI, kPa, Bar, Feet of Head or Meters of Water.

The HMI shall allow programming and display of: Cut In & Cut Out Pressure Settings · Minimum Run Timer · Sequential Start Timer · Periodic Test Timer

The HMI allows the user to select the language of the system and download the manual or view the manual on screen.

#### 1.6 State and Alarm Indication

Visual indication shall be provided for the following:

Power Available • Motor Run • Periodic Test • Manual Start • Deluge Valve Start • Remote Automatic Start • Remote Manual Start • Emergency Start • Pump On Demand/Automatic Start • Pump Room Temperature • Lockout

The digital display shall visually indicate the following alarms:

Alternate Power Lock Rotor Current • Alternate Power Phase Reversal • Automatic Power Transfer Switch Trouble • Locked Rotor Current • Fail To Start • Under/Over Current • Under/Over Voltage • Phase Unbalance • Check Test Solenoid Valve • Weekly Test Cut-In Not Reached • Transducer Fault • Control Voltage Not Healthy • Motor Trouble • Pump Room Alarm • Invalid Cut-In • Phase Reversal • Power Loss • Phase Loss L1 / L2 / L3 • Low Water Level • Pump On Demand • Low Ambient Temp. • Service Required

Audible and visible alarm shall be provided for:

Fail To Start • Alternate Circuit Breaker Off or Tripped • Alternate Isolating Switch Tripped/ Open •

Remote Alarm contacts shall be provided for:

Power Available • Phase Reversal • Motor Run • Common Pump Room Alarm (Overvoltage, Undervoltage, Phase Unbalance, Low/High Pump Room Temperature) • Common Motor Trouble (Overcurrent, Fail To Start, Undercurrent, Ground Fault) • Transfer Switch in Normal Position • Transfer Switch in Alternate Position • Alternate Power Isolating Switch

#### 1.7 Pressure and Event Recording

The system shall be capable of logging pressure data and operational events with time/date stamp. The system shall display operational events for the lifetime of the controller and display the pressure data in text or graphical form. The controller shall log the Date/Time of the first start-up and the controller total power on time from that date. The controller shall log first and last statistics for: First Setup · On Time · Start Count · Last Start Time · Min/Max/Average System Pressure · Min/Max/Average Pump Room Temp. · Jockey Pump On Time/Start Count/Last Start Time · Phase to Phase Voltages with Date Stamp · Amps Per Phase with Date Stamp

#### 1.8 USB Host Controller

A USB port capable of accepting a USB Flash Memory Disk shall be provided for downloading pressure and event logs.

#### 1.9 Serial Communications

The controller shall feature Modbus with TCP/IP frame format and shielded female RJ45 connector

# 2.0 Pressure Sensing / Wet Parts

The controller shall be supplied with a solid state pressure transducer with a range of 0-500 psi calibrated for 0-300 psi (0-20.7 bar) and a run test solenoid valve. The wet parts shall be externally mounted and include a protective cover. The pressure sensing line connection to the transducer shall be 1/2-inch FNPT. Provisions for a redundant pressure transducer shall be provided.

## 2.1 Controller Operation

The controller shall be capable of automatic starting via pressure drop, remote start signal from an automatic device or a deluge valve. The controller can be manually started via the START push-button, the RUN TEST push-button, or a remote signal from a manual device. Stopping can be achieved manually with the STOP push-button or automatically after expiration of minimum run timer or test timer. The minimum run timer (off delay), sequential start timer (on delay) and periodic test timer shall be field adjustable and include a visual countdown on the display. Adjustable timers shall be supplied for Momentary Normal Power Outage Override, Alternate Power Available Delay, Transfer Trouble Delay, Retransfer To Normal, Generator Cooldown.

#### 2.2 Manufacturer

The controller shall be a Firetrol brand.

# Firetrol, Inc.

MARKIII+ Electric Fire Pump Controllers - Solid State Reduced Current Starting with Power Transfer Switch



Description—Firetrol® FTA1930 Solid State Reduced Current Starting Fire Pump Controllers feature soft start, soft stop and system sensing capabilities that not only provide for reduced current starting, but also offer an improved level of hydro mechanical performance. The controller monitors, displays and records fire pump system information.

Power Transfer Switches are completely assembled with Firetrol Electric Fire Pump Controllers; full or reduced voltage types. The power transfer switches are built for use with generator set or 2nd utility use. The entire package of power transfer switch and controller is completely factory assembled, wired, tested and shipped as a complete unit for easy field connection to the power sources and the fire pump motor.

Approvals – Firetrol fire pump controllers are listed by Underwriters' Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers, CSA, Standard for Industrial Control Equipment, and approved by Factory Mutual. They are built to meet or exceed the requirements of the approving authorities as well as NEMA and the latest editions of NFPA 20, Installation of Centrifugal Fire Pumps, and NFPA 70, National Electrical Code.

The power transfer switches are listed

by Underwriters' Laboratories, Inc., in accordance with UL218, Standard for Fire Pump Controllers; UL1008, Automatic Transfer Switches; UL508, Industrial Control Equipment, CSA, Standard for Industrial Control Equipment; and approved by Factory Mutual. They are built to meet or exceed the requirements of the approving authorities as well as NEMA and the latest editions of NFPA 20, Installation of Centrifugal Fire Pumps, and NFPA 70, National Electrical Code.

Controller Standard Features — The following are included as standard with each controller:

- Voltage surge protector
- Main Disconnect Switch sized for connected motor horsepower and voltage
- Fire pump Circuit Breaker
- Single Handle Isolating Disconnect Switch/Circuit Breaker mechanism
- Motor contactor
- Single Handle Emergency Manual Run Mechanism to mechanically close motor contactor contacts in an emergency condition
- Built-in Start and Stop push-buttons to bypass automatic start circuits
- Daylight Savings Time Option
- Elapsed Time Meter
- 7.0" LCD capacitive type color touch screen (HMI technology) software upgradeable operator interface powered by an embedded microcomputer with software PLC logic.
- 500 PSI Pressure Transducer (calibrated for 300 PSI (20.7 Bar))and Test Solenoid for fresh water applications, externally mounted with protective cover
- Audible alarm buzzer embedded in the MarkIII+
- Pump Room Ambient Temperature Switch, Display and Alarms

- Pressure and Event Recording with Date Stamp to System Memory Accessible VIA The User Interface and Downloadable to a USB Flash Drive
- Modbus Communications with TCP/IP frame format and a shielded female RJ45 connector
- NEMA Type 2 (IEC IP22) enclosure with bottom entry gland plate and lifting lugs
- Suitable for use as Service Equipment
- The controller supplies visual indication of the following: Power Available
   Motor Run Periodic Test Manual Start Deluge Valve Start Remote Automatic Start Remote Manual Start Emergency Start Pump On Demand (Automatic Start) Pump Room Temp. Lockout
- The controller displays visual indication for the following alarm conditions:
   Control Voltage Not Healthy Invalid Cut-In Lock Rotor Current Loss of Power Low Ambient Temp. Low Water Level Motor Trouble Phase Reversal Overcurrent Overvoltage Phase Loss L1 / L2 / L3 Phase Unbalanced Pressure Transducer Fault Detected Pump On Demand Pump Room Alarm Service Required Undercurrent Undervoltage Check Test Solenoid Weekly Test Cut-In Reached
- Audible and Visible Indication for Fail To Start.
- DPDT 8A, 250VAC remote alarm contacts are provided for: Power Available
  - Phase Reversal Motor Run
  - Common Pump Room Alarm (Overvoltage / Undervoltage / Phase Unbalance / Low Pump Room Temp. / High Pump Room Temp)
  - Common Motor Trouble (Overcurrent / Fail To Start / Undercurrent / Ground Fault)
- Field Adjustable Timers with Visual

Countdown for Minimum Run (Off Delay), Sequential Start (On Delay) and Weekly Test

**Transfer Switch Standard Features** — The following are included as standard with each controller:

- Visual indication of the following: Alternate Power Lock Rotor Current Alternate Power Phase Reversal Automatic Transfer Switch Trouble
- Audible and Visible indication of: Alternate Power Circuit Breaker OFF or Tripped • Alternate Power Isolating Switch Tripped/Open
- Transfer Switch test push-button
- Bypass for re-transfer and generator shutdown
- The following adjustable time delays are provided: Momentary Normal Power Outage Override • Emergency Power Available Delay • Transfer Trouble Delay
   Retransfer to Normal • Generator Cooldown
- Remote Alarm Contacts For: Emergency Isolating Switch Off • Transfer Switch in Normal Position • Transfer Switch in Emergency Position


FOR MODEL # INFORMATION SEE PUBLICATION SD1000-61 FOR OPTIONS AND MODIFICATIONS SEE PUBLICATION OP1000-72

# Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com



# Mark<sup>III</sup> Electric Fire Pump Controllers - Solid State Reduced Current Starting

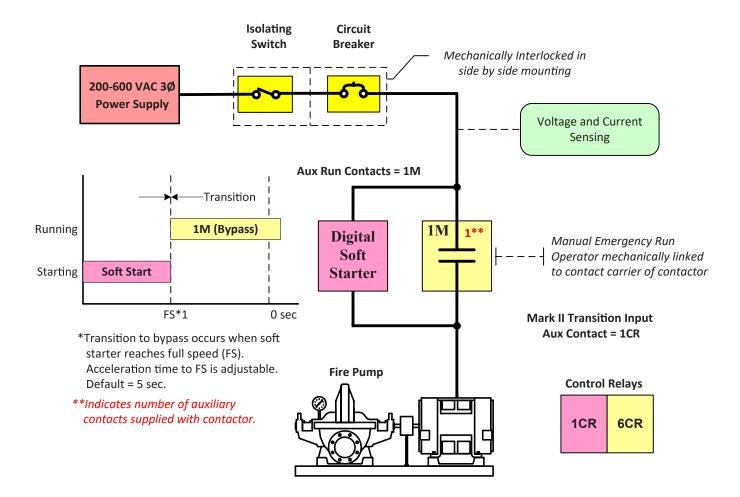

# Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com

# MARKIII Electric Fire Pump Controllers with Power Transfer Switch

# FTA1000, 1250, 1300, 1350, 1800, 1930 ELECTRIC FIRE PUMP CONTROLLERS

Example: FTA<u>1300</u>-<u>AM75HH</u>-<u>TSA</u>-<u>xx</u>

#### Starting Method

1000 - Across-the-line (direct on line)

1250 - Part Winding (50%-50% windings)

1300 - Wye-delta (star-delta), open transition

1350 - Wye-delta (star-delta), closed transition

1800 - Autotransformer

1930 - Digital Solid-state soft start/stop

#### Start/Stop Options

- A Automatic/Manual start with manual stop only (default). Field configurable to automatic start with timed permissive stop after minimum run time and manual start with manual stop only.
- C For Manual only operation of Foam Controllers (use option -LK3)

Code	200-208V	2	20-240V	380	-415V	440-48	80V	550-600V	
	5-150 HP	5	5-200 HP	5-3	50 HP	5-400	ΗP	5-500 HP	
M - Standard	100kA		100kA	100kA		100kA		N/A	
N - Intermediate	150kA		150kA	150kA		150kA		N/A	
P - High	200kA		200kA	20	0kA	200kA		N/A	
Q - Intermediate	ermediate N/A		N/A	N	I/A	N/A		100kA	
R - Standard	d N/A		N/A	N/A		N/A		50kA	
	200-208V		220-240V		380-	-415V	4	40-480V	
Code	200 HP		250-400	) HP	400-	500 HP	45	50-500 HP	
M - Standard	50A		50kA	50kA 50		OkA		50kA	
N - Intermediate	N/A		N/A		N	N/A		N/A	
P - High	100kA		100kA		100kA		100kA		
Q - Intermediate	N/A		N/A		N/A		N/A		
R - Standard	N/A		N/A		N/A			N/A	

For controller options and modifications see Publication OP10000-72.

# Modifications See Publication OP1000-72 Automatic Transfer

#### Three Phase Voltage

Switch

A - 220-240 Volt, 60 Hertz (230 V)

AZ - 220-230 Volt, 50 Hertz

B - 440-480 Volt, 60 Hertz (460 V)

BZ - 415 Volt, 50 Hertz

C - 550-600 Volt, 60 Hertz (575 V)

F - 380 Volt, 60 Hertz

FZ - 380 Volt, 50 Hertz

FF - 400 Volt, 60 Hertz

FX - 400 Volt, 50 Hertz

H - 208 Volt, 60 Hertz

HH-200 Volt, 60 Hertz

Horsepower Rating	
03 - 3 HP	100 - 100 HP
05 - 5 HP	125 - 125 HP
07 - 7 1/2 HP	150 - 150 HP
10 - 10 HP	200 - 200 HP
15 - 15 HP	250 - 250 HP
20 - 20 HP	300 - 300 HP
25 - 25 HP	350 - 350 HP
30 - 30 HP	400 - 400 HP
40 - 40 HP	450 - 450 HP
50 - 50 HP	500 - 500 HP
60 - 60 HP	
75 - 75 HP	

# Firetrol, Inc.

3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com



FTA1000 - FTA1930 With Opt. -TSA (FTA950)

# Mark III+ Electric Fire Pump Controllers

	SPECIAL ENCLOSURES
Option	Description
	Enclosure, NEMA Type 2 (IEC IP22), Painted Steel (Standard)
-E	Enclosure, NEMA Type 4 (IEC IP65), Painted Steel
-F	Enclosure, NEMA Type 4X (IEC IP66), #304 Stainless Steel, Brushed Finish
-FD	Enclosure, NEMA Type 4X (IEC IP66), #316 Stainless Steel, Brushed Finish
-FDB	Enclosure, NEMA Type 4X (IEC IP66), #316 Stainless Steel, Seam Welded, Brushed Finish
-FDP	Enclosure, NEMA Type 4X (IEC IP66), #316 Stainless Steel, Painted Finish
-FXP	Enclosure, NEMA Type 4X (IEC IP66), #304 Stainless Steel, Painted Finish
-G	Enclosure, NEMA Type 12 (IEC IP54), Painted Steel
-T	Enclosure, NEMA Type 3R (IEC IP24), Painted Steel
-U	Enclosure, NEMA Type 3 (IEC IP54), Painted Steel

#### **CIRCUIT BREAKER OPTION**

Option				De	escription				
Standard S -M -R	Short Circui 200-208V 5-150 HP 100kA (M)	t Current R 220-240V 5-200 HP 100kA (M)	ating 380-415V 5-350 HP 100kA (M)	440-480V 5-400 HP 100kA (M)	550-600V 5-500 HP 50kA (R)	200-208V 200 HP 50kA (M)	220-240V 250-400 HP 50kA (M)	380-415V 400-500 HP 50kA (M)	440-480V 450-500 HP 50kA (M)
Intermedic -N -Q	ate Short Ci 200-208V 5-150 HP 150kA (N)	rcuit Curre 220-240V 5-200 HP 150kA (N)	nt Rating 380-415V 5-350 HP 150kA (N)	440-480V 5-400 HP 150kA (N)	550-600V 5-500 HP 100kA (Q)	200-208V 200 HP N/A	220-240V 250-400 HP N/A	380-415V 400-500 HP N/A	440-480V 450-500 HP N/A
High Short -P	Circuit Cur 200-208V 5-150 HP 200kA	rent Rating 220-240V 5-200 HP 200kA	380-415V 5-350 HP 200kA	440-480V 5-400 HP 200kA	550-600V 5-500 HP NA	200-208V 200 HP 100kA	220-240V 250-400 HP 100kA	380-415V 400-500 HP 100kA	440-480V 450-500 HP 100kA

#### **ANTI-CONDENSATION SPACE HEATERS**

Option	Description
None	
- J	Space Heater, 120V Externally Powered with Circuit Breaker & Thermostat
-K	Space Heater, 120V Externally Powered with Circuit Breaker & Humidistat
-M	Space Heater, 240V Externally Powered with Circuit Breaker & Thermostat
-N	Space Heater, 240V Externally Powered with Circuit Breaker & Humidistat
-JKP	Space Heater, 120V Externally Powered with Circuit Breaker, Thermostat and Humidistat in Parallel
-MNP	Space Heater, 240V Externally Powered with Circuit Breaker, Thermostat and Humidistat in Parallel

#### PRESSURE TRANSDUCERS, SOLENOID VALVES, PLUMBING

Option	Description
	Wetted Parts including Pressure Sensor and Test Solenoid, 300 PSI (20.4 Bar) Fresh Water
-B1	Wetted Parts including Pressure Sensor and Test Solenoid, 500 PSI (34.5 Bar) Fresh Water (For Factory Calibration Purposes Only)
-C1	Wetted Parts including Pressure Sensor and Test Solenoid, 300 PSI (20.4 Bar), Sea Water
-D1	Wetted Parts including Pressure Sensor and Test Solenoid, 500 PSI (34.5 Bar), Sea Water
-SP1	Low Suction Pressure Transducer, Fresh Water, 0-300 PSI (20.4 Bar) with Visible Indication and Output Contacts
-SP2	Low Suction Pressure Transducer, Sea Water, 0-300 PSI (20.4 Bar) with Visible Indication and Output Contact

# FOAM PUMP APPLICATIONS Description

#### Option

#### Required For Foam

-LR1 Low Foam Level External Input, Visible Indications and Alarm Contacts, Additive with Provisions for Proof Pressure Switch Connection, With Lockout and Remote Alarm Indication For Interlock On (Locked Out)

Required	Required For Foam				
-LK1	Foam Pump Application With Pressure Transducer and Run Test Solenoid Valve (Auto. Start)				
-LK2	Foam Pump Application With Pressure Transducer and Run Test Solenoid Valve, Stainless Steel (Auto. Start)				
-1 K3	Foam Pump Application Without Pressure Transducer and Run Test Solenoid Valve (Manual Start)				

ΔΙΔΡΜς

#### Optional For Foam

-DVC Operation, Dump Valve Control

Ontion	ALAKIVO
Option	Description
-AC	Extra Alarm Output Contacts, Pump Operating (2 Form-C)
-AM	Alarm Output Contacts, Fail to Start
-AV	Alarm Output Contacts, Low Pump Room Temperature
-AW	Alarm Output Contacts, Reservoir Low
-AYI	Configurable Low Suction Pressure, Visible/Output Contacts with External Digital Input
-BW1	Extra Alarm Output Contacts, Phase Failure/Phase Reversal
-BY1	Alarm Output Contacts, Overcurrent
-CTS1	Configurable Low Suction Pressure, Visible/Output Contacts with Suction Pressure Transducer
-EH1	Alarm Output Contacts, Main Relief Valve Open
-EK	Alarm Output Contacts, Flow Meter Open
-JR	Visible Indicator, Jockey Pump Operating
-JT	Alarm, Audible/Visible, Jockey Pump Trouble
-KH	Alarm Output Contacts, Common Alarm
-P1	Alarm, Audible/Visible, Built-In 120V Supervisory System (Includes Visible Supervisory Voltage Normal Indication and Audible Pump Operating, Phase Failure and Phase Reversal Indication
-PE	Alarm Output Contacts, Low System Pressure (Pump on Demand)
-PT	Alarm, Audible/Visible, Built-In 240V Supervisory System (Includes Visible Supervisory Voltage Normal Indication and Audible Pump Operating, Phase Failure and Phase Reversal Indication

#### Option Description -ED2 Normal Source Load Shedding with Adjustable Time Delay to Remove Non-Critical Loads Before Starting -EL Series Pumping Operation, High Zone Controller -EM Series Pumping Operation, Mid Zone Controller -EN Series Pumping Operation, Low Zone Controller Marking, CE with External Wet Parts (Requires NEMA Type 12 (IP54) Enclosure as Minimum) -IEC -MZN Neutral Lug, Service Entrance, Non-Insulated Bonded to Enclosure Seismic Certification compliant to OSHPD (CA) for rigid base or wall mount only -OSP -PK Terminal Blocks, Extra Remote Start -PY Output Contacts, Motor Space Heater, Externally Powered -S Tropicalization -SEI Seismic Certification compliant to CBC 2019, IBC 2018 for rigid base or wall mount only -USBX Data Port, External USB -ZPM1 Data Port, RS-485 Modbus RTU Controller Temperature Rating, 55°C (131°F) Ambient Temperature -Y55 -XCR Export Packaging (Wooden Crating to Conform to IPPC Standards)

**MISCELLANEOUS** 


# TRANSFER SWITCH ONLY OPTIONS

Option	Description
-EC	Extra Contacts for Remote Indication, Transfer Switch Position
-ED1	Alternate Source Load Shedding with Adjustable Time Delay to Remove Non-Critical Loads Before Starting


**Firetrol, Inc.** 3412 Apex Peakway Apex, North Carolina 27502 P +1 919 460 5200 F +1 919 460 5250 www.firetrol.com



# MARKIII+ Electric Fire Pump Controllers - Solid State Reduced Current Starting With Power Transfer Switch

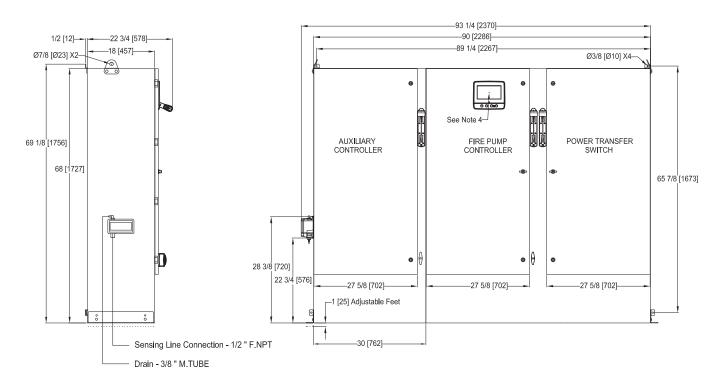

NOTE:
DRAIN CONNECTION MUST
BE PIPED TO WASTE DRAIN.
FAILURE TO CONNECT TO A FLOOR
DRAIN WILL RESULT IN UNSAFE
CONDITIONS OF STANDING WATER
AROUND CONTROLLER.

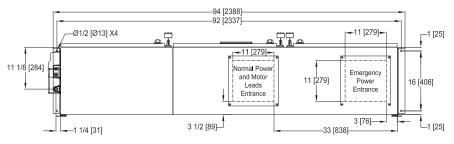

VOLTAGE/POWER TABLE				
LINE VOLTAGE	MOTOR HORSEPOWER			
208	150			
220-240	200			
380-400-415	300			
440-480	350-400			
600	450-500			
APPROX SHIPPING WT: 1150 [522]				


#### NOTES:

- 1. STANDARD: NEMA 2
- 2. STANDARD PAINT: TEXTURED RED RAL3002
- 3. ALL DIMENSIONS IN INCHES [MILLIMETERS] SHIPPING WEIGHT IN POUNDS [KG]
- 4. CENTER OF MARK III + SCREEN: 61 5/8 [1564] FROM BOTTOM OF ENCLOSURE
- BOTTOM CONDUIT ENTRANCE THROUGH
   REMOVABLE GLAND PLATE RECOMMENDED
- 6. USE WATERTIGHT CONDUIT AND CONNECTOR ONLY
- 7. PROTECT EQUIPMENT AGAINST DRILLING CHIPS
- 8. DOOR SWING EQUAL TO DOOR WIDTH
- DRAWINGS FOR CONSTRUCTION PURPOSES
   MUST BE OBTAINED FROM FIRETROL OR THE LOCAL
   FIRETROL REPRESENTATIVE
- 10. SEISMIC MOUNTING TO BE RIGID WALL AND BASE ONLY

	DRAWN BY CIR 11 FINAL CIR 11			REMOVED BELL AND UPDATED THE MARKI	II TO MARKIII PLUS	В	-	CIR	CIR	10-27-21	
	SIZE A	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	BY	APP	DATE
$\Rightarrow$	DRAWN BY	CIR	11-5-19	Firetrol, Inc.	DIMENSIONS & SHIPPING WEIGHT	FTA1930 WITH FTA950	DD1930-84				CDL
THIRD ANGLE		Oiix			DIOITAL COLID CTATE DEDUCED CLIDE	SENT FIRE DUMP CONTROLLED	וטטו	930-0	30-04		
PROJECTION	F <b>IN</b> AL APPROVAL	CIR	11-5-19	© Firetrol, Inc. Not for construction. Subject to change without notice.	DIGITAL SOLID STATE REDUCED CURRENT FIRE PUMP CONTROLLER AND POWER TRANSFER SWITCH PWG REV B REV NO -						HEET 1 OF 1
All rights reserved. Th	e drawing and the in	formation co	ntained or depicted it	nerein are the sole property of Firetrol, Inc. Copies are communicated to the re	ciplent in strict confidence and may not be retransmitted, published, reproduced, cop	oled or used in any manner, including as the basis for the manufacture of	r sale of any prod	ucts, without the ex	press prio	written co	insent of Firetrol, Inc.



# MARKIII+ Electric Fire Pump Controllers - Solid State Reduced Current Starting With Power Transfer Switch

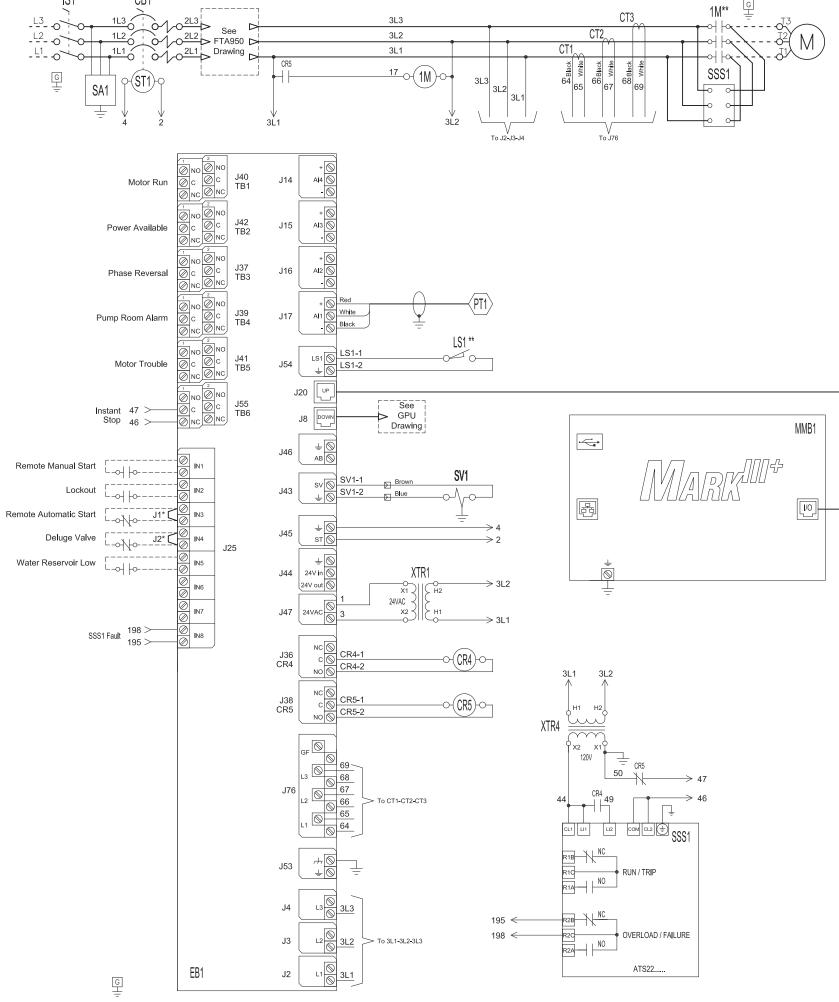

	Legend					
1M	Contactor					
СВ	Circuit Breaker					
CR	Control Relay					
СТ	Current Transformer					
EB	Electric I/O Board					
IS	Isolating Switch					
J	Jumper					
LS	Limit Switch					
PT	Pressure Transducer					
SA	Surge Arrester					
SSS	Soft Starter					
ST	Shunt Trip					
SV	Solenoid Valve					
MMB	Mark III Main Board					
XTR	Transformer					

VOLTAG	VOLTAGE/POWER TABLE							
LINE VOLTAGE	MOTOR HORSEPOWER							
208	125-200							
220-240	150-200							
380-400-415	250-400							
440-480	300-450							
600	350-500							

Drawing for information only.


Manufacturer reserves the right to modify this drawing without notice. Contact manufacturer for "As Built" drawing.

UPDATED TO MARK III+						В	-	TEF	TEF	10/27/21	
					REVISED TO AGREE W/CURRENT MFG		Α	-	CIR	CIR	2-10-21
	size B	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	BY	APP	DATE
		JMW	12-2-19	<b>Firetrol, Inc.</b>	WIRING SCHEMATIC	FTA1930 W/FTA950	DRAWING I	IG NUMBER 81930-81			
THIRD ANGLE		011111		DI	DICITAL COLID STATE DEDUCED CURRENT FIRE DUMP CONTROLLED		VV 3 I	930-0	1		CDL
PROJECTION	FINAL APPROVAL	CIR	12-2-19	© Firetrol, Inc. Not for construction. Subject to change without notice.	DIGITAL SOLID STATE REDUCED CURRENT FIRE PUMP CONTROLLER WITH POWER TRANSFER SWITCH			ECN NO -		s	HEET 1 OF 1

<sup>\*</sup> Remove jumper to use this feature
\*\* Contact closes when emergency start is in "ON" position





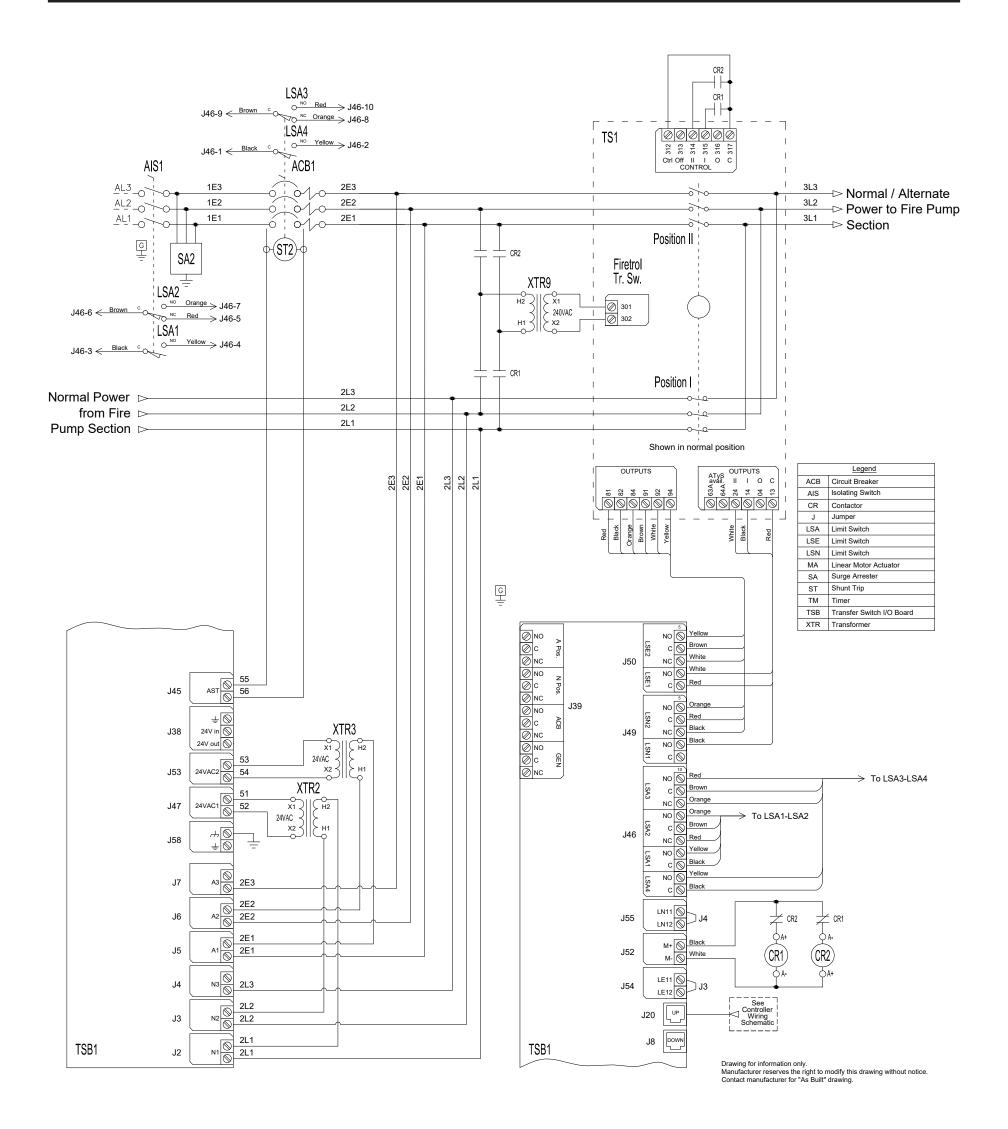

VOLTAG	E/POWER TABLE
LINE VOLTAGE	MOTOR HORSEPOWER
380-415	250-400
440-480	300-500
550-600	400-500

				REVISION DESCRIPTION	REV	ECN NO	BY	APP DA	ATE	
DRAWN	BY CIR	CIR 12-9-19	<b>Firetrol, Inc.</b>	WIRING SCHEMATIC	FTA950	DRAWING NUMBER - WS950-61				
THIRD ANGLE	VB1 CIK	12 0 10	,	FIRE PUMP TRANSFER SWITCH FOR G	EN CET AND	1 1139	VV3930-01			CDL
PROJECTION FINAL APPROV	/AL CIR	12-9-19	© Firetioi, inc. Not for construction.	SECOND UTILITY POWER SOURCE FO	DWG REV -	ECN NO -		SHEET 1	OF 1	

# **Field Connections Alarm & Control Terminals**



## MARKIII Electric Fire Pump Controllers - Solid State Reduced Current Starting

#### Control Terminals (EB1) Remote Alarm Terminals (EB1) Terminals Wire Size: 24 - 12 AWG 0.5 Nm Terminals Wire Size: 24 - 12 AWG 0.5 Nm Normally open Closes to alarm Normally closed Opens to alarm Remote Manual Start Close to start pump Motor Run Normally open Closes to alarm Ø NC Normally closed Opens to alarm ' Normally open Closes to alarm Normally closed Opens to alarm Close to block start Lockout Power Avallable Normally open Closes to alarm Normally closed Opens to alarm Normally open Closes to alarm Normally closed Opens to alarm Open to start pump Ø NC Remote Automatic Start Phase Reversal Normally open Closes to alarm Normally closed Opens to alarm Normally open Closes to alarm Normally closed Opens to alarm Ø NC Open to start pump Deluge Valve Pump Room Alarm \*\* Normally open Closes to alarm Normally closed Opens to alarm Normally open Closes to alarm Normally closed Alarm Inputs (EB1) Opens to alarm { Motor Trouble \*\* Normally open Terminals Wire Size: 24 - 12 AWG 0.5 Nm Closes to alarm Normally closed Opens to alarm { Normally open Closes to alarm Normally closed Opens to alarm J55 TB6 Water Reservoir Low (Fleld Programmable \*\*\*) Normally open Closes to alarm Normally closed Opens to alarm

#### Network Connection (VMB1)

Shielded Female Connector RJ45



\* Remove jumper to use this feature \*\* Re-assignable \*\*\* Not available on FTA1930 models

Drawing for information only.

Manufacturer reserves the right to modify this drawing without notice.

Contact manufacturer for "As Built" drawing.

						RELEASED		-	-	CIR	CIR	11-11-19
		SIZE A	BY	DATE		REVISION DESCRIPTION		REV	ECN NO	BY	APP	DATE
	$\Rightarrow$	DRAWN BY	CIR	11-10-19	firetrol, Inc.	FIELD CONNECTIONS	FTA1930	DRAWING NUMBER FC1930-60				
	HIRD ANGLE		J \		, ,	DIGITAL SOLID STATE REDUCED CURRENT FIRE PUMP CONTROLLER			930-00			CDL
	PROJECTION	FINAL APPROVAL	CIR	11-10-19	© Firetrol, Inc. Not for construction. Subject to change without notice.	DIGITAL SOLID STATE REDUCED CORR	ENT FIRE PUMP CONTROLLER	DWG REV -	SH	HEET 1 OF 1		
_	All rights reserved. The	e drawing and the li	nformation co	intained or depicted	nerein are the sole property of Firetrol, Inc. Copies are communicated to the re	ciplent in strict confidence and may not be retransmitted, published, reproduced, cop	led or used in any manor, including as the basis for the manufacture or	sale of any produ	cts, without the exc	ress prior	written cor	sent of Firetrol, Inc.

# Field Connections Line & Motor Wire Terminal Capacity



# MARKIII Electric Fire Pump Controllers - Solid State Reduced Current Starting

#### Line Terminals

# Bonding Ground YYY THE PROPERTY OF THE PROPER

#### Notes:

- 1 For proper wire sizing, refer to NFPA70 and NEC (USA) or CEC (Canada) or local code.
- 2 Controller suitable for service entrance in USA.
- 3 For more accurate motor connections refer to motor manufacturer or motor nameplate.
- 4 Controller is phase sensitive. Incoming lines must be connected in ABC sequence.


#### COPPER CONDUCTORS for Isolating Switch (IS1).

Field Wiring According to Bending Space (AWG or MCM). Terminals L1 - L2 - L3

Bending Space				5 " (1	27 mm)			8 " (203 mm)				
HP Voltage	5	7.5	10	15	20	25	30	40	50	60		
208	1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (2 to 1/0)	1x (1/0 to 3/0)	1x (3/0 to 250)	1x (4/0 to 250)		
220 to 240	1x (10 to 1/0)	1x (10 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (1 to 3/0)	1x (2/0 to 3/0)	1x (3/0 to 250)		
380 to 416	1x (10 to 1/0)	1x (10 to 1/0)	1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (3 to 1/0)		
440 to 480	1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)					
600	1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)						

Bending Space		12 '	" (305 mm)			16 " (406 mm)								
HP Voltage	75	100	125	150	200	250	300	350	400	450	500			
208	2x (1/0 to 500)	2x (2/0 to 500)	2x (4/0 to 500)	2x (250 to 500)	3x (4/0 to 500)									
220 to 240	1x (250)	2x (2/0 to 500)	2x (3/0 to 500)	2x (4/0 to 500)	2x (350 to 500)	3x (250 to 500)								
380 to 416	1x (1/0 to 3/0)	1x (3/0 to 250)	1x (250)	2x (1/0 to 500)	2x (3/0 to 500)	2x (4/0 to 500)	2x (300 to 500)	2x (400 to 500)	3x (250 to 500)	3x (300 to 500)				
440 to 480	1x (1 to 3/0)	1x (2/0 to 3/0)	1x (3/0 to 250)	1x (4/0 to 250)	2x (1/0 to 500)	2x (3/0 to 500)	2x (4/0 to 500)	2x (300 to 500)	2x (350 to 500)	2x (400 to 500)	3x (250 to 500)			
600	1x (3 to 1/0)	1x (1 to 3/0)	1x (2/0 to 3/0)	1x (3/0 to 250)	1x (250)	2x (2/0 to 500)	2x (3/0 to 500)	2x (4/0 to 500)	2x (250 to 500)	2x (300 to 500)	2x (350 to 500)			
Bending Space	5 " (127 mm) 8 " (203 mm)			12 " (305 mm)										

#### **Motor Terminals**



#### **COPPER CONDUCTORS** for Motor Connection (1M).

Field Wiring According to Bending Space (AWG or MCM). Terminals T1 - T2 - T3

HP Voltage	5	7.5	10	15	20	25	30	40	50	60		
208	1x (10 to 2)	1x (8 to 2)	1x (8 to 2)	1x (6 to 2)	1x (4 to 2)	1x (3 to 2/0)	1x (2 to 2/0)	1x (1/0 to 3/0)	1x (3/0)	1x (4/0 to 300)		
220 to 240	1x (10 to 2)	1x (10 to 2)	1x (8 to 2)	1x (6 to 2)	1x (4 to 2)	1x (4 to 2/0)	1x (3 to 2/0)	1x (1/0 to 3/0)	1x (2/0 to 3/0)	1x (3/0)		
380 to 416	1x (10 to 2)	1x (10 to 2)	1x (10 to 2)	1x (8 to 2)	1x (8 to 2)	1x (6 to 2)	1x (6 to 1/0)	1x (4 to 2)	1x (3 to 2/0)	1x (1 to 2/0)		
440 to 480	1x (10 to 2)	1x (8 to 2)	1x (8 to 2)	1x (6 to 2)	1x (6 to 2)	1x (4 to 2/0)	1x (3 to 2/0)					
600	1x (10 to 2)	1x (8 to 2)	1x (8 to 2)	1x (6 to 2)	1x (6 to 2)	1x (4 to 2/0)						
НР												

HP Voltage	75	100	125	150	200	250	300	350	400	450	500
208	1x (300)	2x (2/0 to 300)	2x (4/0 to 300)	2x (250 to 300)	2x (400 to 600)						
220 to 240	1x (250 to 300)	2x (2/0 to 300)	2x (3/0 to 300)	2x (4/0 to 300)	2x (350 to 500)	2x (500 to 600)					
380 to 416	1x (1/0 to 3/0)	1x (3/0)	1x (250 to 300)	1x (300)	2x (3/0 to 300)	2x (4/0 to 300)	2x (300)	2x (400 to 500)	2x (500 to 600)	2x (600)	
440 to 480	1x (1 to 1/0)	1x (2/0 to 3/0)	1x (3/0)	1x (4/0 to 300)	2x (1/0 to 300)	2x (3/0 to 300)	2x (4/0 to 300)	2x (300)	2x (350 to 500)	2x (400 to 600)	2x (500 to 600)
600	1x (3 to 1/0)	1x (1 to 1/0)	1x (2/0 to 3/0)	1x (3/0)	1x (250 to 300)	2x (2/0 to 300)	2x (3/0 to 300)	2x (4/0 to 300)	2x (250 to 300)	2x (300)	2x (350 to 500)

	SIZE A	BY	DATE	Ī
THIRD ANGLE	DRAWN BY	CIR	11-10-19	
PROJECTION	FINAL APPROVAL	CIR	11-10-19	




REVISED TO AGREE W/CURRENT MFG			-	CIR	CIR	2-10-21
REVISION DESCRIPTION			ECN NO	BY	APP	DATE
FIELD CONNECTIONS FTA1930		DRAWING	NUMBER 930-6	1		
DIGITAL SOLID STATE REDUCED CURRENT FIRE PUMP CONTROLLER			930-0	l		CDL
			ECN			
LINE AND MOTOR FIELD WIRE TERMINAL CAPACITY			NO -		Sł	HEET 1 OF 1



# Power Transfer Switch For Use With Mark<sup>III</sup> Electric Fire Pump Controllers

#### Power Terminals



#### Notes:

1 - Controller is phase sensitive. Incoming lines must be connected in ABC sequence.

#### **COPPER CONDUCTORS** for Isolating Switch (AIS1).


Field Wiring According to Bending Space (AWG or MCM). Terminals AL1 - AL2 - AL3

Bending Space	5 " (127 mm)							8 " (203 mm)				
HP Voltage	5	7.5	10	15	20	25	30	40	50	60		
208	1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (2 to 1/0)	1x (1/0 to 3/0)	1x (3/0 to 250)	1x (4/0 to 250)		
220 to 240	1x (10 to 1/0)	1x (10 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (1 to 3/0)	1x (2/0 to 3/0)	1x (3/0 to 250)		
380 to 416	1x (10 to 1/0)	1x (10 to 1/0)	1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)	1x (3 to 1/0)		
440 to 480	1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)	1x (3 to 1/0)					
600	1x (10 to 1/0)	1x (8 to 1/0)	1x (8 to 1/0)	1x (6 to 1/0)	1x (6 to 1/0)	1x (4 to 1/0)						

Bending Space	12 " (305 mm)			16 " (406 mm)							
HP Voltage	75	100	125	150	200	250	300	350	400	450	500
208	2x (1/0 to 500)	2x (2/0 to 500)	2x (4/0 to 500)	2x (250 to 500)	3x (4/0 to 500)						
220 to 240	1x (250)	2x (2/0 to 500)	2x (3/0 to 500)	2x (4/0 to 500)	2x (350 to 500)	3x (250 to 500)					
380 to 416	1x (1/0 to 3/0)	1x (3/0 to 250)	1x (250)	2x (1/0 to 500)	2x (3/0 to 500)	2x (4/0 to 500)	2x (300 to 500)	2x (400 to 500)	3x (250 to 500)	3x (300 to 500)	
440 to 480	1x (1 to 3/0)	1x (2/0 to 3/0)	1x (3/0 to 250)	1x (4/0 to 250)	2x (1/0 to 500)	2x (3/0 to 500)	2x (4/0 to 500)	2x (300 to 500)	2x (350 to 500)	2x (400 to 500)	3x (250 to 500)
600	1x (3 to 1/0)	1x (1 to 3/0)	1x (2/0 to 3/0)	1x (3/0 to 250)	1x (250)	2x (2/0 to 500)	2x (2/0 to 500) 2x (3/0 to 500) 2x (4/0 to 500) 2x (250 to 500) 2x (300 to		2x (300 to 500)	2x (350 to 500)	
Bending Space	5 " (127 mm)	mm) 8 " (203 mm)			12 " (305 mm)						

#### Remote Alarm Terminals (TSB1)

Terminals Wire Size 24 - 12 AWG



#### Control Terminals (TSB1)

Terminals Wire Size 24 - 12 AWG 0.5 Nm



Drawing for information only.

Manufacturer reserves the right to modify this drawing without notice.

Contact manufacturer for "As Built" drawing.

THIRD ANGLE PROJECTION	SIZE A	BY	DATE		
	DRAWN BY	CIR	11-10-19		
	FINAL APPROVAL	CIR	11-10-19		



REVISED TO AGREE W/CURRENT MANUFACTURING			-	CIR	CIR	1-14-21	
REVISION DESCRIPTION			ECN NO	BY	APP	DATE	
FIELD CONNECTIONS	FTA950	DRAWING NUMBER FC950-65					
POWER TRANSFER SWITCH FOR GENERATOR OR SECOND UTILITY POWER SOURCE			ECN -		Sł	HEET 1 OF 1	